

OSELAS.Support
OSELAS.Training
OSELAS.Development
OSELAS.Services

How to become a PTXdist Guru Based on the OSELAS.BSP() Pengutronix Generic-x86



Pengutronix e. K.
Peiner Straße 6-8
31137 Hildesheim

+49 (0)51 21 / 20 69 17 - 0 (Fon)
+49 (0)51 21 / 20 69 17 - 55 55 (Fax)

info@pengutronix.de

Cut Here and Stick on your Monitor



Don't Panic

Contents

1	Welcome to the Embedded World	7
1.1	First Steps in the Embedded World	7
1.2	From Server to Embedded	8
1.3	Linux = Embedded Linux	8
2	Getting a working Environment	9
2.1	Download Software Components	9
2.2	PTXdist Installation	10
2.2.1	Main Parts of PTXdist	10
2.2.2	Extracting the Sources	11
2.2.3	Prerequisites	12
2.2.4	Configuring PTXdist	13
2.3	Toolchains	14
2.3.1	Using existing Toolchains from different Vendors	14
2.3.2	Omitting building a Toolchain	15
2.3.3	Building a Toolchain	16
2.3.4	Building the OSELAS.Toolchain for OSELAS.BSP-Pengutronix-Generic-2014.07.0	17
2.3.5	Protecting the Toolchain	18
2.3.6	Building additional Toolchains	18
3	PTXdist User's Manual	19
3.1	How does it work?	19
3.1.1	PTXdist's perception of the world	19
3.1.2	PTXdist's build process	20
3.2	First steps with PTXdist	21
3.2.1	Extracting the Board Support Package	22
3.2.2	Selecting a Userland Configuration	23
3.2.3	Selecting a Hardware Platform	23
3.2.4	Selecting a Toolchain	24
3.2.5	Building the Root Filesystem Content	24
3.2.6	What we Got Now	24
3.2.7	Creating a Root Filesystem Image	25
3.2.8	Running all Parts in an emulated Environment (QEMU)	25
3.3	Adapting the OSELAS.BSP-Pengutronix-Generic-2014.07.0 Project	26
3.3.1	Working with Kconfig	26
3.3.2	Adapting Platform Settings	28
3.3.3	Adapting Linux Kernel Settings	29
3.3.4	Adapting Userland Settings	29
4	PTXdist Developer's Manual	31
4.1	PTXdist's directory hierarchy	32
4.1.1	Rule Files	32
4.1.2	Patch Series	32

4.1.3	Runtime Configuration	33
4.2	Adding new Packages	33
4.2.1	Rule File Creation	34
4.2.2	Make it Work	35
4.2.3	Advanced Rule Files	41
4.2.4	Patching Packages	47
4.2.5	Creating Patches for a Package	47
4.2.6	Modifying Autotoolized Packages	48
4.3	Adding binary only Files	49
4.3.1	Old style - single files	49
4.3.2	New style - using archives	49
4.3.3	Creating a Rules File	50
5	PTXdist Reference	51
5.1	Variables Reference	52
5.1.1	PTXDIST_TOPDIR	52
5.1.2	PTXDIST_WORKSPACE	52
5.1.3	PTXDIST_SYSROOT_CROSS	52
5.1.4	PTXDIST_SYSROOT_HOST	52
5.1.5	PTXDIST_SYSROOT_TARGET	52
5.1.6	CROSS_PATH	53
5.1.7	HOST_PATH	53
5.1.8	ROOTDIR	53
5.1.9	PTXCONF_PLATFORM	53
5.1.10	PTXDIST_PLATFORMSUFFIX	53
5.1.11	PTXDIST_PLATFORMCONFIGDIR	53
5.1.12	PTXDIST_PLATFORMDIR	53
5.2	Rule File Macro Reference	53
5.2.1	targetinfo	54
5.2.2	touch	54
5.2.3	clean	54
5.2.4	install_copy	54
5.2.5	install_tree	56
5.2.6	install_alternative_tree	57
5.2.7	install_alternative	57
5.2.8	install_link	58
5.2.9	install_archive	59
5.2.10	install_lib	60
5.2.11	ptx/endis	60
5.2.12	ptx/disen	61
5.2.13	ptx/wwo	61
5.2.14	ptx/ifdef	62
5.3	Rule file layout	62
5.3.1	Default stage rules	62
5.3.2	Skipping a Stage	65
5.4	PTXdist parameter reference	65
5.4.1	Setup and Project Actions	65
5.4.2	Build Actions	66
5.4.3	Clean Actions	66

6	Various Aspects of Daily Work	67
6.1	Using an External Kernel Source Tree	67
6.1.1	Cloning the Linux Kernel Source Tree	67
6.1.2	Configuring the PTXdist Project	67
6.1.3	Work Flow	68
6.2	Discovering Runtime Dependencies	68
6.2.1	Dependencies on Shared Libraries	69
6.2.2	Dependencies on other Resources	69
6.3	Debugging with CPU emulation	70
6.3.1	Running an Application made for a different Architecture	71
6.3.2	Debugging an Application made for a different Architecture	71
6.4	Migration between Releases	72
6.5	Software Installation and Upgrade	72
6.5.1	ipkg Usage in PTXdist	73
6.5.2	Packet Installation	73
6.5.3	Automatic Packet Download	74
6.5.4	The ipkg Command	74
6.6	Increasing Build Speed	75
6.6.1	Using available CPU Cores	76
6.6.2	Manually adjusting CPU Core usage	77
6.6.3	Building in Background	77
6.6.4	Building Platforms in Parallel	77
6.7	Using a Distributed Compiler	78
6.7.1	Setting-Up the Distributed Compiler	79
6.7.2	Enabling PTXdist for the Distributed Compiler	79
6.7.3	How to use the Distributed Compiler with PTXdist	79
6.8	Using pre-build archives	79
6.8.1	Introduction	80
6.8.2	Creating pre-build archives	80
6.8.3	Using pre-build archives	80
6.8.4	Packages without pre-build archives support	81
6.8.5	Workflow with pre-build archives	81
6.8.6	Uses cases	82
6.9	Downloading Packages from the Web	82
6.10	Creating a new Autotools Based Library	82
6.10.1	Creating the Library Template	83
6.10.2	Licence related stuff	83
6.10.3	Build system related files	84
6.10.4	Template file for pkg-config	85
6.10.5	Generic template files	86
6.10.6	Library related files	86
6.11	Frequently Asked Questions (FAQ)	87
7	Document Revisions	90
8	Thanks	91
9	Getting help	92
9.1	Mailing Lists	92
9.1.1	About PTXdist in Particular	92

9.1.2	About Embedded Linux in General	92
9.2	About Working on the Linux Kernel	92
9.3	Chat/IRC	92
9.4	Commercial Support	93

1 Welcome to the Embedded World

1.1 First Steps in the Embedded World

Once upon in time, programming embedded systems was easy: all a developer needed when he wanted to start a new product was a good toolchain, consisting of

- a compiler
- maybe an assembler
- probably an EPROM burning device

and things could start. After some more or less short time, every register of the CPU was known, a variety of library routines had been developed and our brave developer was able to do his project with the more and more well-known system. The controllers had legacy interfaces like RS232, i2c or SPI which connected them to the outside world and the main difference between the controllers available on the market was the number of GPIO pins, UARTS and memory resources.

Things have changed. Hardware manufacturers have weakened the border between deeply embedded micro-controllers – headless devices with just a few pins and very limited computing power – and full blown microprocessors. System structures became much more complicated: where our good old controllers have had just some interrupts with some small interrupt service routines, we today need complicated generic interrupt infrastructures, suitable for generic software frameworks. Where we've had some linearly mapped flash ROM and some data RAM we today have multi-stage-pipeline architectures, memory management units, virtual address spaces, on-chip-memory, caches and other complicated units, which is not exactly what the embedded system developer wants program every other day.

Entering embedded operating systems. Although there are still some processors out there (like the popular ARM7TDMI based SoCs) which can be programmed the good old non-operating-system way with reasonable effort, it in fact is becoming more and more difficult. On the other hand, legacy I/O interfaces like RS232 are increasingly often replaced by modern plug-and-play aware communication channels: USB, FireWire (IEEE1394), Ethernet & friends are more and more directly being integrated into today's microcontroller hardware. Whereas some of these interfaces can "somehow" be handled the old controller-style way of writing software, the developer following this way will not be able to address the security and performance issues which come up with the modern network accessible devices.

During the last years, more and more of the small-scale companies which developed little embedded operating systems have been pushed out of the market. Nearly no small company is able to support all the different interfaces, communication stacks, development tools and security issues out there. New interfaces and -variants (like USB On-the-Go) are developed faster than operating system developers can supply the software for them. The result is a consolidation of the market: today we see that, besides niche products, probably only the largest commercial embedded operating system suppliers will survive that development.

Only the largest commercial...? There is one exception: when the same situation came up in the "mainstream" computer market at the beginning of the 1990ies, people started to develop an alternative to the large commercial operating systems: Linux. Linux did never start with a ready-to-use solution: people had a problem, searched for a solution but didn't find one. Then they started to develop one themselves, often several people did this

in parallel, and in a huge community based evolution mechanism the best solutions found their way into the Linux kernel, which over the time formed one of the most reliable and performant kernels available today. This "develop-and-evolute" mechanism has shown its effectiveness over and over again in the server and desktop market of today.

1.2 From Server to Embedded

The fact that for most technical problems that might occur it may be possible to find somebody on the internet who has already worked on the same or another very similar problem, was one of the major forces behind the success story of Embedded Linux.

Studies have shown that more than 70% of the embedded developers are not satisfied with a black-box operating system: they want to adapt it to their needs, to their special hardware situation (which most times is Just Different than anything available). Embedded projects are even more variegated than desktop- or server projects, due to the fact that there exist so many different embedded processors with lots of peripherals out there.

Linux has evolved from an i386 only operating system to a kernel running on nearly every modern 32 bit processor available today: x86, PowerPC, ARM, MIPS, m68k, cris, Super-H etc. The kernel supplies a hardware abstraction layer which lets our brave embedded developer once again concentrate on his very special problem, not on handling negligibilities like memory management.

But Linux is only half of the story. Besides the kernel, a Linux based embedded system consists of a "userland": a filesystem, containing all the small tools which form a small Unix system. Only the combination of the kernel and a Userland let's the developer run "normal" processes on his x86 development machine as well as on his embedded target.

1.3 Linux = Embedded Linux

Whereas the mainstream developers were always able to use normal Linux distributions like SuSE, RedHat, Mandrake or Debian as a base for their applications, things are different for embedded systems.

Due to the restricted resources these systems normally have, distributions have to be small and should only contain those things that are needed for the application. Today's mainstream distributions cannot be installed in less than 100 MiB without major loss of functionality. Even Debian, probably today the most customizable mainstream distribution, cannot be shrunk below this mark without for example losing the packet management, which is an essential feature of using a distribution at all.

Additionally, source code for industrial systems has to be


- auditable and
- reproducible.

Embedded developers usually want to know what's in their systems – be it that they have to support their software for a long time span (something like 10-15 years are usual product lifetimes in automation applications) or that they have such a special scenario that they have to maintain their integrated source of their Userland themselves.

Entering PTXdist.

2 Getting a working Environment

SIMPLY EXPLAINED

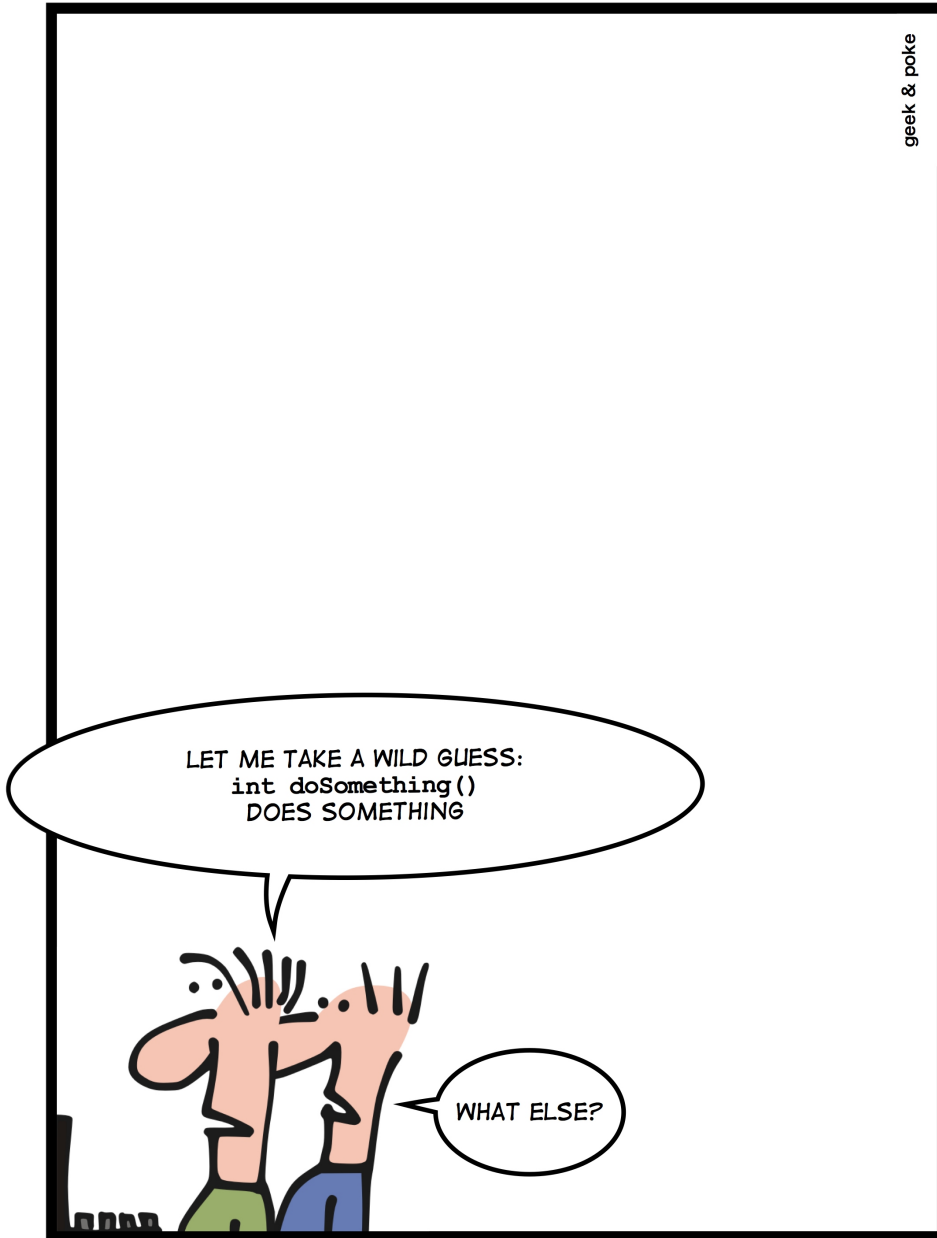

SELF DOCUMENTING CODE

2.1 Download Software Components

In order to follow this manual, some software archives are needed. There are several possibilities how to get these: either as part of an evaluation board package or by downloading them from the Pengutronix web site.

The central place for OSELAS related documentation is <http://www.oselas.com> and <http://www.ptxdist.de>. These websites provide all required packages and documentation (at least for software components which are available to the public).

In order to build OSELAS.BSP-Pengutronix-Generic-2014.07.0, the following source archives have to be available on the development host:

- ptxdist-2014.07.0.tar.bz2
- OSELAS.BSP-Pengutronix-Generic-2014.07.0.tar.gz
- ptxdist-2013.12.0.tar.bz2
- OSELAS.Toolchain-2013.12.2.tar.bz2

If they are not available on the development system yet, it is necessary to get them.



The PTXdist- 2013.12.0 is only required to build the toolchain, while PTXdist- 2014.07.0 is required to build the BSP. All PTXdist revisions can co-exist.

2.2 PTXdist Installation

The PTXdist build system can be used to create a root filesystem for embedded Linux devices. In order to start development with PTXdist it is necessary to install the software on the development system.

This chapter provides information about how to install and configure PTXdist on the development host.

2.2.1 Main Parts of PTXdist

The most important software component which is necessary to build an OSELAS.BSP() board support package is the `ptxdist` tool. So before starting any work we'll have to install PTXdist on the development host.

PTXdist consists of the following parts:

The `ptxdist` Program: `ptxdist` is installed on the development host during the installation process. `ptxdist` is called to trigger any action, like building a software packet, cleaning up the tree etc. Usually the `ptxdist` program is used in a *workspace* directory, which contains all project relevant files.

A Configuration System: The config system is used to customize a *configuration*, which contains information about which packages have to be built and which options are selected.

Patches: Due to the fact that some upstream packages are not bug free – especially with regard to cross compilation – it is often necessary to patch the original software. PTXdist contains a mechanism to automatically apply patches to packages. The patches are bundled into a separate archive. Nevertheless, they are necessary to build a working system.

Package Descriptions: For each software component there is a “recipe” file, specifying which actions have to be done to prepare and compile the software. Additionally, packages contain their configuration snippet for the config system.

Toolchains: PTXdist does not come with a pre-built binary toolchain. Nevertheless, PTXdist itself is able to build toolchains, which are provided by the OSELAS.Toolchain() project. More in-deep information about the OSELAS.Toolchain() project can be found here: http://www.pengutronix.de/oselas/toolchain/index_en.html

Board Support Package This is an optional component, mostly shipped aside with a piece of hardware. There are various BSP available, some are generic, some are intended for a specific hardware.

2.2.2 Extracting the Sources



Do the following steps at best in your own home directory (\$HOME). You need root permissions only in the `make install` step, and **nowhere** else.

To install PTXdist, the archive Pengutronix provides has to be extracted:

ptxdist-2014.07.0.tar.bz2 The PTXdist software itself

The PTXdist archive has to be extracted into some temporary directory in order to be built before the installation, for example the `local/` directory in the user's home. If this directory does not exist, we have to create it and change into it:

```
$ cd
$ mkdir local
$ cd local
```

Next step is to extract the archive:

```
$ tar -xjf ptxdist-2014.07.0.tar.bz2
```

If everything goes well, we now have a `PTXdist-2014.07.0` directory, so we can change into it:

```
$ cd ptxdist-2014.07.0
$ ls -lF
total 530
-rw-r--r--  1 jb user  18446 Sep  9 15:59 COPYING
-rw-r--r--  1 jb user   4048 Sep  9 15:59 CREDITS
-rw-r--r--  1 jb user 115540 Sep  9 15:59 ChangeLog
-rw-r--r--  1 jb user    57 Sep  9 15:59 INSTALL
-rw-r--r--  1 jb user   3868 Sep  9 15:59 Makefile.in
-rw-r--r--  1 jb user   4268 Sep  9 15:59 README
-rw-r--r--  1 jb user   2324 Sep  9 15:59 README.devel
-rw-r--r--  1 jb user  63516 Sep  9 15:59 TODO
-rwxr-xr-x  1 jb user    28 Sep  9 15:59 autogen.sh
drwxr-xr-x  2 jb user    72 Sep  9 15:59 bin
drwxr-xr-x 12 jb user   352 Sep  9 15:59 config
-rwxr-xr-x  1 jb user 224087 Sep  9 17:34 configure
-rw-r--r--  1 jb user  12196 Sep  9 15:59 configure.ac
drwxr-xr-x 10 jb user   248 Sep  9 15:59 generic
drwxr-xr-x 242 jb user  8168 Sep  9 15:59 patches
drwxr-xr-x  2 jb user  1624 Sep  9 15:59 platforms
drwxr-xr-x  4 jb user   112 Sep  9 15:59 plugins
lrwxrwxrwx  1 jb user    7 Oct  4 20:42 projectroot -> generic
```

```
drwxr-xr-x  6 jb user  60664 Sep  9 15:59 rules
drwxr-xr-x  9 jb user   936 Sep  9 15:59 scripts
drwxr-xr-x  2 jb user   512 Sep  9 15:59 tests
```

2.2.3 Prerequisites

Before PTXdist can be installed it has to be checked if all necessary programs are installed on the development host. The configure script will stop if it discovers that something is missing.

The PTXdist installation is based on GNU autotools, so the first thing to be done now is to configure the packet:

```
$ ./configure
```

This will check your system for required components PTXdist relies on. If all required components are found the output ends with:

```
[...]
checking whether python development files are present... yes
checking for patch... /usr/bin/patch
checking whether /usr/bin/patch will work... yes

configure: creating ./config.status
config.status: creating Makefile

ptxdist version 2014.07.0 configured.
Using '/usr/local' for installation prefix.

Report bugs to ptxdist@pengutronix.de
```

Without further arguments PTXdist is configured to be installed into `/usr/local`, which is the standard location for user installed programs. To change the installation path to anything non-standard, we use the `--prefix` argument to the `configure` script. The `--help` option offers more information about what else can be changed for the installation process.

The installation paths are configured in a way that several PTXdist versions can be installed in parallel. So if an old version of PTXdist is already installed there is no need to remove it.

One of the most important tasks for the `configure` script is to find out if all the programs PTXdist depends on are already present on the development host. The script will stop with an error message in case something is missing. If this happens, the missing tools have to be installed from the distribution before re-running the `configure` script.

When the `configure` script is finished successfully, we can now run

```
$ make
```

All program parts are being compiled, and if there are no errors we can now install PTXdist into its final location. In order to write to `/usr/local`, this step has to be performed as user `root`:

```
$ sudo make install
[enter password]
[...]
```

If we don't have root access to the machine it is also possible to install PTXdist into some other directory with the `--prefix` option. We need to take care that the `bin/` directory below the new installation dir is added to our `$PATH` environment variable (for example by exporting it in `~/ .bashrc`).

The installation is now done, so the temporary folder may now be removed:

```
$ cd ../../
$ rm -fr local
```

2.2.4 Configuring PTXdist

When using PTXdist for the first time, some setup properties have to be configured. Two settings are the most important ones: Where to store the source archives and if a proxy must be used to gain access to the world wide web.

Run PTXdist's setup:

```
$ ptxdist setup
```

Due to PTXdist is working with sources only, it needs various source archives from the world wide web. If these archives are not present on our host, PTXdist starts the `wget` command to download them on demand.

Proxy Setup

To do so, an internet access is required. If this access is managed by a proxy `wget` command must be adviced to use it. PTXdist can be configured to advice the `wget` command automatically: Navigate to entry *Proxies* and enter the required addresses and ports to access the proxy in the form:

`<protocol>://<address>:<port>`

Source Archive Location

Whenever PTXdist downloads source archives it stores these archives in a project local manner. This is the default behaviour. If we are working with more than one PTXdist based project, every project would download its own required archives in this case. To share all source archives between all projects, PTXdist can be configured to share only one archive directory for all projects it handles: Navigate to menu entry *Source Directory* and enter the path to the directory where PTXdist should store archives to share between its projects.

Generic Project Location

If we already installed the generic projects we should also configure PTXdist to know this location. If we already did so, we can use the command `ptxdist projects` to get a list of available projects and `ptxdist clone` to get a local working copy of a shared generic project.

Navigate to menu entry *Project Searchpath* and enter the path to projects that can be used in such a way. Here we can configure more than one path, each part can be delimited by a colon. For example for PTXdist's generic projects and our own previous projects like this:

```
/usr/local/lib/ptxdist-2014.07.0/projects:/office/my_projects/ptxdist
```

Leave the menu and store the configuration. PTXdist is now ready for use.



In order to build the toolchain in the next step, the specific PTXdist- 2013.12.0 is required. We must repeat the previous steps with the PTXdist- 2013.12.0 to install it on our host as well. All PTXdist revisions can co-exist.

2.3 Toolchains

Before we can start building our first userland we need a cross toolchain. On Linux, toolchains are no monolithic beasts. Most parts of what we need to cross compile code for the embedded target comes from the *GNU Compiler Collection*, `gcc`. The `gcc` packet includes the compiler frontend, `gcc`, plus several backend tools (`cc1`, `g++`, `ld` etc.) which actually perform the different stages of the compile process. `gcc` does not contain the assembler, so we also need the *GNU Binutils package* which provides lowlevel stuff.

Cross compilers and tools are usually named like the corresponding host tool, but with a prefix – the *GNU target*. For example, the cross compilers for ARM and powerpc may look like

- `arm-softfloat-linux-gnu-gcc`
- `powerpc-unknown-linux-gnu-gcc`

With these compiler frontends we can convert e.g. a C program into binary code for specific machines. So for example if a C program is to be compiled natively, it works like this:

```
$ gcc test.c -o test
```

To build the same binary for the ARM architecture we have to use the cross compiler instead of the native one:

```
$ arm-softfloat-linux-gnu-gcc test.c -o test
```

Also part of what we consider to be the "toolchain" is the runtime library (`libc`, dynamic linker). All programs running on the embedded system are linked against the `libc`, which also offers the interface from user space functions to the kernel.

The compiler and `libc` are very tightly coupled components: the second stage compiler, which is used to build normal user space code, is being built against the `libc` itself. For example, if the target does not contain a hardware floating point unit, but the toolchain generates floating point code, it will fail. This is also the case when the toolchain builds code for i686 CPUs, whereas the target is i586.

So in order to make things working consistently it is necessary that the runtime `libc` is identical with the `libc` the compiler was built against.

PTXdist doesn't contain a pre-built binary toolchain. Remember that it's not a distribution but a development tool. But it can be used to build a toolchain for our target. Building the toolchain usually has only to be done once. It may be a good idea to do that over night, because it may take several hours, depending on the target architecture and development host power.

2.3.1 Using existing Toolchains from different Vendors

If a toolchain from a different vendor than OSELAS is already installed which is known to be working, the toolchain building step with PTXdist may be omitted.



The `OSELAS.BoardSupport()` Packages shipped for PTXdist have been tested with the `OSELAS.Toolchains()` built with the same PTXdist version. So if an external toolchain is being used which isn't known to be stable, a target may fail. Note that not all compiler versions and combinations work properly in a cross environment.

Every `OSELAS.BoardSupport()` Package checks for its `OSELAS.Toolchain` it's tested against, so using a toolchain from a different vendor than OSELAS requires an additional step:

Open the `OSELAS.BoardSupport()` Package menu with:

```
$ ptxdist platformconfig
```

and navigate to architecture ---> toolchain and check for specific toolchain vendor. Clear this entry to disable the toolchain vendor check.

Preconditions a toolchain from a different vendor than OSELAS must meet:

- it shall be built with the configure option `--with-sysroot` pointing to its own C libraries.
- it should not support the *multilib* feature as this may confuse PTXdist which libraries are to select for the root filesystem

If we want to check if our toolchain was built with the `--with-sysroot` option, we just run this simple command:

```
$ mytoolchain-gcc -v 2>&1 | grep with-sysroot
```

If this command **does not** output anything, this toolchain was not built with the `--with-sysroot` option and cannot be used with PTXdist.

2.3.2 Omitting building a Toolchain

Pengutronix also provides 'ready to use' toolchains in a binary manner. These toolchains are built from the OSELAS.Toolchain bundle, so they comply with all of Pengutronix's board support packages and we can use them instead of building our own one.

The binary OSELAS toolchains are provided as *Debian Distribution Packages*. Also most non-Debian distributions can handle such packages.

In order to install the OSELAS binary toolchains on a Debian based system the following steps are required:

Add the OSELAS Server as a Package Source

To register the OSELAS package server to the list of known package servers, we add a new file with the name `pengutronix.list` into the directory `/etc/apt/sources.list.d/`. The basename of this file isn't important, while the extension `.list` is.

The contents of this new file describe the Pengutronix server as an available package source. It is defined via one text line:

```
deb http://debian.pengutronix.de/debian/ sid main contrib non-free
```

Note: if the directory `/etc/apt/sources.list.d/` does not exist, the text line mentioned above must be added to the file `/etc/apt/sources.list` instead.

Make the OSELAS Server Content available

The package manager now must update its packages list with the following command:

```
$ apt-get update
```

Install the Archive Keyring

To avoid warnings about untrusted package sources we can install the OSELAS archive keyring with the following command:

```
$ apt-get install pengutronix-archive-keyring
```

Install the binary OSELAS Toolchain

Now everything is in place to install the binary OSELAS toolchain for the OSELAS.BSP-Pengutronix-Generic-2014.07.0 board support package:

```
$ apt-get install oselas.toolchain-2013.12.2-i586-unknown-linux-gnu-gcc-4.8.2-glibc-2.18-binutils-2.24-  
kernel-3.12-sanitized
```

These package names are very long and hard to type without making typos. An easier way is to ask the package manager for available toolchains and just use the name by copy and paste it.

```
$ apt-cache search "oselas.toolchain-.*-i586.*unknown.*"  
oselas.toolchain-2013.12.2-i586-unknown-linux-gnu-gcc-4.8.2-glibc-2.18-binutils-2.24-kernel-3.12-  
sanitized
```

The binary OSELAS Toolchain Package for non-Debian Distributions

The *Debian Distribution Packages* can be found on our server at <http://debian.pengutronix.de/debian/pool/main/o/>

The OSELAS.BSP-Pengutronix-Generic-2014.07.0 related OSELAS toolchain package can be found here:

Subpath is:

oselas.toolchain-2013.12.2-i586-unknown-linux-gnu-gcc-4.8.2-glibc-2.18-binutils-2.24-kernel-3.12-sanitized/

Package filename is:

oselas.toolchain-2013.12.2-i586-unknown-linux-gnu-gcc-4.8.2-glibc-2.18-binutils-2.24-kernel-3.12-sanitized*.deb.

Package filenames for 32 bit host machines are ending on *_i386.deb and for 64 bit host machines on *_amd64.deb.

2.3.3 Building a Toolchain

PTXdists handles toolchain building as a simple project, like all other projects, too. So we can download the OSELAS.Toolchain bundle and build the required toolchain for the OSELAS.BoardSupport() Package.



Building any toolchain of the OSELAS.Toolchain-2013.12.2 is tested with PTXdists-2014.07.0. Pengutronix recommends to use this specific PTXdists to build the toolchain. So, it might be essential to install more than one PTXdists revision to build the toolchain and later on the Board Support Package if the latter one is made for a different PTXdists revision.

A PTXdists project generally allows to build into some project defined directory; all OSELAS.Toolchain projects that come with PTXdists are configured to use the standard installation paths mentioned below.

All OSELAS.Toolchain projects install their result into `/opt/OSELAS.Toolchain-2013.12.2/`.



Usually the `/opt` directory is not world writeable. So in order to build our OSELAS.Toolchain into that directory we need to use a root account to change the permissions. PTXdist detects this case and asks if we want to run `sudo` to do the job for us. Alternatively we can enter:

```
mkdir /opt/OSELAS.Toolchain-2013.12.2
chown <username> /opt/OSELAS.Toolchain-2013.12.2
chmod a+rwX /opt/OSELAS.Toolchain-2013.12.2.
```

We recommend to keep this installation path as PTXdist expects the toolchains at `/opt`. Whenever we go to select a platform in a project, PTXdist tries to find the right toolchain from data read from the platform configuration settings and a toolchain at `/opt` that matches to these settings. But that's for our convenience only. If we decide to install the toolchains at a different location, we still can use the `toolchain` parameter to define the toolchain to be used on a per project base.

2.3.4 Building the OSELAS.Toolchain for OSELAS.BSP-Pengutronix-Generic-2014.07.0



Do the following steps in your own home directory (`$HOME`). The final OSELAS.Toolchain gets installed to `opt/`, but must **never** be compiled in the `opt/` directory. You will get many funny error messages, if you try to compile the OSELAS-Toolchain in `opt/`.

To compile and install an OSELAS.Toolchain we have to extract the OSELAS.Toolchain archive, change into the new folder, configure the compiler in question and start the build.

The required compiler to build the OSELAS.BSP-Pengutronix-Generic-2014.07.0 board support package is

```
i586-unknown-linux-gnu_gcc-4.8.2_glibc-2.18_binutils-2.24_kernel-3.12-sanitized
```

So the steps to build this toolchain are:



In order to build any of the OSELAS.Toolchains, the host must provide the tool `fakeroot`. Otherwise the message `bash: fakeroot: command not found` will occur and the build stops.



Please ensure the 'current directory' (the `.` entry) is not part of your `PATH` environment variable. PTXdist tries to sort out this entry, but might not be successful in doing so. Check by running `ptxdist print PATH` if the output still contains any kind of 'current directory' as a component. If yes, remove it first.

```
$ tar xf OSELAS.Toolchain-2013.12.2.tar.bz2
$ cd OSELAS.Toolchain-2013.12.2
$ ptxdist select ptxconfigs/└
      i586-unknown-linux-gnu_gcc-4.8.2_glibc-2.18_binutils-2.24_kernel-3.12-sanitized.ptxconfig
$ ptxdist go
```

At this stage we have to go to our boss and tell him that it's probably time to go home for the day. Even on reasonably fast machines the time to build an OSELAS.Toolchain is something like around 30 minutes up to a few hours.

Measured times on different machines:

- Single Pentium 2.5 GHz, 2 GiB RAM: about 2 hours
- Turion ML-34, 2 GiB RAM: about 1 hour 30 minutes
- Dual Athlon 2.1 GHz, 2 GiB RAM: about 1 hour 20 minutes
- Dual Quad-Core-Pentium 1.8 GHz, 8 GiB RAM: about 25 minutes
- 24 Xeon cores 2.54 GHz, 96 GiB RAM: about 22 minutes

Another possibility is to read the next chapters of this manual, to find out how to start a new project.

When the OSELAS.Toolchain project build is finished, PTXdist is ready for prime time and we can continue with our first project.

2.3.5 Protecting the Toolchain

All toolchain components are built with regular user permissions. In order to avoid accidental changes in the toolchain, the files should be set to read-only permissions after the installation has finished successfully. It is also possible to set the file ownership to root. This is an important step for reliability, so it is highly recommended.

2.3.6 Building additional Toolchains

The OSELAS.Toolchain-2013.12.2 bundle comes with various predefined toolchains. Refer the `ptxconfigs/` folder for other definitions. To build additional toolchains we only have to clean our current toolchain project, removing the current `selected_ptxconfig` link and creating a new one.

```
$ ptxdist clean
$ rm selected_ptxconfig
$ ptxdist select ptxconfigs/any_other_toolchain_def.ptxconfig
$ ptxdist go
```

All toolchains will be installed side by side architecture dependent into directory

`/opt/OSELAS.Toolchain-2013.12.2/architecture_part.`

Different toolchains for the same architecture will be installed side by side version dependent into directory

`/opt/OSELAS.Toolchain-2013.12.2/architecture_part/version_part.`

3 PTXdist User's Manual

This chapter should give any newbie the information he/she needs to be able to handle any embedded Linux projects based on PTXdist. Also the advanced user may find new valueable information.

3.1 How does it work?

PTXdist supports various aspects of the daily work to develop, deploy and maintain an embedded Linux based project.

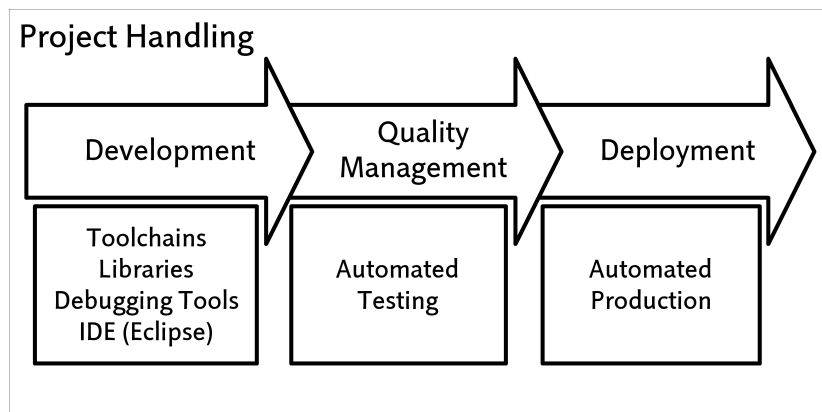


Figure 3.1: Objectives in a project

The most important part is the development. For this project phase, PTXdist provides features to ensure reproducibility and verifiability.

3.1.1 PTXdist's perception of the world

PTXdist works project centric. A PTXdist project contains all information and files to populate any kind of target system with all required software components.

- Specific configuration for
 - Bootloader
 - Kernel
 - Userland (root filesystem)
- Adapted files (or generic ones) for runtime configuration
- Patches for all kind of components (to fix bugs or improve features)

Some of these information or files are coming from the PTXdist base installation (patches for example), but also can be part of the project itself. By this way, PTXdist can be adapted to any kind of requirement.

Most users are fine with the information and files the PTXdist base installation provides. Development of PTXdist is done in a way to find default settings most user can work with. But advanced users can still adapt to their special needs.

As stated above, a PTXdist project consists of all required parts, some of these parts are separated by design: PTXdist separates a platform configuration from userland configuration (root filesystem). So, platforms can share a common userland configuration, but use a specific kernel configuration in their own platform configuration.

Collecting various platforms into one single project should help to maintain such projects. But some platforms do need special userland (think about graphic/non graphic platforms). To be able to also collect this requirement into one single project, so called *collections* are supported. With this feature, a user can configure a full featured main userland, reduced via a collection by some components for a specific platform where it makes no sense to build and ship them.

A different use case for collections could be the security of an application. While the development is ongoing all kind of debugging and logging helpers are part of the root filesystem. But the final production root filesystem uses collections to omit all these helpers and to reduce the risc of security vulnerability.

PTXdist can handle the following project variations:

- one hardware platform, one userland configuration (common case)
- one hardware platform, various userland configurations
- various hardware platforms, one userland configuration (common case)
- various hardware platforms, one userland configuration, various collections
- various hardware platforms, various userland configuration
- various hardware platforms, various userland configuration, various collections

3.1.2 PTXdist's build process

When PTXdist is building one part (we call it a *package*) of the whole project, it is divided into up to six stages:

get The package will be obtained from its source (downloaded from the web for example)

extract The package archive gets extracted and patched if a patch set for this package exists

prepare Many packages can be configured in various ways. If supported, this stage does the configuration in a way defined in the menu (project specific)

compile The package gets built.

install The package installs itself into a project local directory. This step is important at least for libraries (other packages may depend on)

targetinstall Relevant parts of the package will be used to build an IPKG archive and the root filesystem

For each single package, one so called *rule file* exists, describing the steps to be done in each stage shown above (refer section 5.3 for further details).

Due to the *get* stage, PTXdist needs a working internet connection to download an archive currently not existing on the development host. But there are ways to prevent PTXdist from doing so (refer to section 2.2.4).

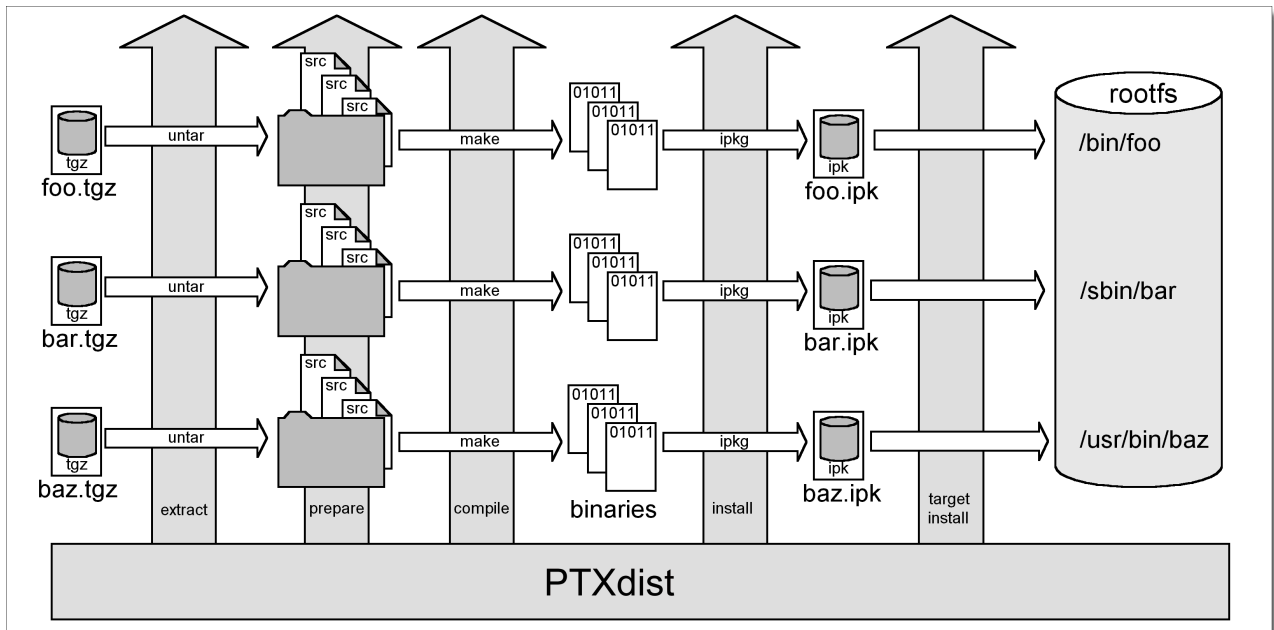


Figure 3.2: The build process

3.2 First steps with PTXdist

PTXdist works as a console command tool. Everything we want PTXdist to do, we have to enter as a command. But it's always the same base command:

```
$ ptxdist <parameter>
```

To run different functions, this command must be extended by parameters to define the function we want to run. If we are unsure what parameter must be given to obtain a special function, we run it with the parameter *help*.

```
$ ptxdist help
```

This will output all possible parameters and subcommands and their meaning.

As the list we see is very long, let's explain the major parameters usually needed for daily usage:

menu This starts a dialog based frontend for those who do not like typing commands. It will give us access to the most common parameters to configure and build a PTXdist project.

menuconfig Starts the Kconfig based project configurator for the current selected userland configuration. This menu will give us access to various userland components that the root filesystem of our target should consist of.

menuconfig platform Starts the Kconfig based platform configurator. This menu lets us set up all target specific settings. Major parts are:

- Toolchain (architecture and revision)
- boot loader
- root filesystem image type
- Linux kernel (revision)

Note: A PTXdist project can consist of more than one platform configuration at the same time.

menuconfig kernel Runs the standard Linux kernel Kconfig to configure the kernel for the current selected platform. To run this feature, the kernel must be already set up for this platform.

menuconfig collection If multiple platforms are sharing one userland configuration, collections can define a subset of all selected packages for specific platforms. This is an advanced feature, rarely used.

toolchain Sets up the path to the toolchain used to compile the current selected platform. Without an additional parameter, PTXdist tries to guess the toolchain from platform settings. To be successful, PTXdist depends on the OSELAS.Toolchains installed to the /opt directory.

If PTXdist wasn't able to autodetect the toolchain, an additional parameter can be given to provide the path to the compiler, assembler, linker and so on.

select Used to select the current userland configuration, which is only required if there is no `selected_ptxconfig` in the project's main directory. This parameter needs the path to a valid `ptxconfig`. It will generate a soft link called `selected_ptxconfig` in the project's main directory.

platform Used to select the current platform configuration, which is only required if there is no `selected_platformconfig` in the project's main directory. This parameter needs the path to a valid `platformconfig`. It will generate a soft link called `selected_platformconfig` in the project's main directory.

collection Used to select the current collection configuration, which is only required in special cases. This parameter needs the path to a valid `collection`. It will generate a soft link called `selected_collection` in the project's main directory. This is an advanced feature, rarely used.

go The mostly used command. This will start to build everything to get all the project defined software parts. Also used to rebuild a part after its configuration was changed.

images Used at the end of a build to create an image from all userland packages to deploy the target (its flash for example or its hard disk).

setup Mostly run once per PTXdist revision to set up global paths and the PTXdist behavior.

All these commands depending on various files a PTXdist based project provides. So, running the commands make only sense in directories that contains a PTXdist based project. Otherwise PTXdist gets confused and confuses the user with funny error messages.

To show the usage of some listed major subcommands, we are using a generic PTXdist based project.

3.2.1 Extracting the Board Support Package

In order to work with a PTXdist based project we have to extract the archive first.

```
$ tar -zxf OSELAS.BSP-Pengutronix-Generic-2014.07.0.tar.gz
$ cd OSELAS.BSP-Pengutronix-Generic-2014.07.0
```

PTXdist is project centric, so now after changing into the new directory we have access to all valid components.

```
total 32
-rw-r--r-- 1 jb users 1060 Jul  1 16:33 ChangeLog
-rw-r--r-- 1 jb users  741 Jul  1 15:12 README
drwxr-xr-x 5 jb users 4096 Jul  1 15:17 configs
drwxr-xr-x 3 jb users 4096 Jul  1 16:51 documentation
```

```
drwxr-xr-x 5 jb users 4096 Jul  1 15:12 local_src
drwxr-xr-x 4 jb users 4096 Jul  1 15:12 patches
drwxr-xr-x 5 jb users 4096 Jul  1 15:12 projectroot
drwxr-xr-x 3 jb users 4096 Jul  1 15:12 rules
```

Notes about some of the files and directories listed above:

ChangeLog Here you can read what has changed in this release. Note: This file does not always exist.

documentation If this BSP is one of our OSELAS BSPs, this directory contains the Quickstart you are currently reading in.

configs A multiplatform BSP contains configurations for more than one target. This directory contains the respective platform configuration files.

projectroot Contains files and configuration for the target's runtime. A running GNU/Linux system uses many text files for runtime configuration. Most of the time, the generic files from the PTXdist installation will fit the needs. But if not, customized files are located in this directory.

rules If something special is required to build the BSP for the target it is intended for, then this directory contains these additional rules.

patches If some special patches are required to build the BSP for this target, then this directory contains these patches on a per package basis.

tests Contains test scripts for automated target setup.

Next we will build the OSELAS.BSP-Pengutronix-Generic-2014.07.0 to show some of PTXdist's main features.

3.2.2 Selecting a Userland Configuration

First of all we have to select a userland configuration. This step defines what kind of applications will be built for the hardware platform. The OSELAS.BSP-Pengutronix-Generic-2014.07.0 comes with a predefined configuration we select in the following step:

```
$ ptxdist select configs/ptxconfig
info: selected ptxconfig:
      'configs/ptxconfig'
```

3.2.3 Selecting a Hardware Platform

Before we can build this BSP, we need to select one of the possible platforms to build for. In this case we want to build for the Generic-i586:

```
$ ptxdist platform configs/i586-qemu/platformconfig
info: selected platformconfig:
      'configs/i586-qemu/platformconfig'
```

Note: If you have installed the OSELAS.Toolchain() at its default location, PTXdist should already have detected the proper toolchain while selecting the platform. In this case it will output:

```
found and using toolchain:
'/opt/OSELAS.Toolchain-2013.12.2/i586-unknown-linux-gnu/└
  gcc-4.8.2-glibc-2.18-binutils-2.24-kernel-3.12-sanitized/bin'
```

If it fails you can continue to select the toolchain manually as mentioned in the next section. If this autodetection was successful, we can omit the steps of the section and continue to build the BSP.

3.2.4 Selecting a Toolchain

If not automatically detected, the last step in selecting various configurations is to select the toolchain to be used to build everything for the target.

```
$ ptxdist toolchain /opt/OSELAS.Toolchain-2013.12.2/i586-unknown-linux-gnu/┘
gcc-4.8.2-glibc-2.18-binutils-2.24-kernel-3.12-sanitized/bin
```

3.2.5 Building the Root Filesystem Content

Now everything is prepared for PTXdist to compile the BSP. Starting the engines is simply done with:

```
$ ptxdist go
```

PTXdist does now automatically find out from the `selected_ptxconfig` and `selected_platformconfig` files which packages belong to the project and starts compiling their *targetinstall* stages (that one that actually puts the compiled binaries into the root filesystem). While doing this, PTXdist finds out about all the dependencies between the packages and builds them in correct order.

3.2.6 What we Got Now

After building the project, we find even more sub directories in our project.

platform-i586/build-cross Contains all packages sources compiled to run on the host and handle target architecture dependend things.

platform-i586/build-host Contains all packages sources compiled to run on the host and handle architecture independend things.

platform-i586/build-target Contains all package sources compiled for the target architecture.

platform-i586/images Generated files for the target can be found here: Kernel image and root filesystem image.

platform-i586/packages Location for alle individual packages in ipk format.

platform-i586/sysroot-target Contains everything target architecture dependend (libraries, header files and so on).

platform-i586/sysroot-cross Contains everything that is host specific but must handle target architecture data.

platform-i586/sysroot-host Contains everything that is only host specific.

platform-i586/root Target's root filesystem image. This directory can be mounted as an NFS root for example.

platform-i586/root-debug Target's root filesystem image. The difference to `root/` is, all programs and libraries in this directory still have their debug information present. This directory is intended to be used as system root for a debugger. To be used by the debugger, you should setup your debugger with
`set solib-absolute-prefix </path/to/workspace>/root-debug`

platform-i586/state Building every package is divided onto stages. And stages of one package can depend on stages of other packages. In order to handle this correctly, this directory contains timestamp files about finished stages.

This are the generated files:

platform-i586/logfile Every run of PTXdist will add its output to this file. If something fails, this file can help to find the cause.

3.2.7 Creating a Root Filesystem Image

After we have built the root filesystem content, we can make an image, which can be flashed to the target system or copied on some kind of disk media. To do so, we just run

```
$ ptxdist images
```

PTXdist now extracts the content of priorly created **.ipk* packages to a temporary directory and generates an image out of it. PTXdist supports following image types:

- **hd.img:** contains bootloader, kernel and root files in an ext2 partition. Mostly used for X86 target systems.
- **root.jffs2:** root files inside a jffs2 filesystem.
- **uRamdisk:** a u-boot loadable Ramdisk
- **initrd.gz:** a traditional initrd RAM disk to be used as initrdramfs by the kernel
- **root.ext2:** root files inside an ext2 filesystem.
- **root.squashfs:** root files inside a squashfs filesystem.
- **root.tgz:** root files inside a plain gzip compressed tar ball.

All these files can be found in `platform-i586/images` if enabled.

3.2.8 Running all Parts in an emulated Environment (QEMU)

The OSELAS.BSP-Pengutronix-Generic-2014.07.0 is prepared to give every user a chance to run the results of the previous steps even in the absense of real hardware. All we need is a working QEMU on our development host.

Simply run

```
$ ./configs/i586-qemu/run
```

This will start QEMU in full system emulation mode and runs the previously built kernel which then uses the generated disk image to bring up a full Linux based system.

The running system uses a serial device for its communication. QEMU forwards this emulated device to the current development host console. So, we can watch the starting kernel's output and log in on this system.

Note: Log in as user 'root' with no password (just enter).

Also a telnet daemon is running in this emulation. QEMU is configured to forward the standard telnet port 23 of the emulated system to host's port 4444. To connect to the emulated system, we can just run a

```
$ telnet localhost 4444
Trying 127.0.0.1...
Connected to localhost.
Escape character is ']'.

ptx login: root
root@ptx:~
```

Leaving the emulated environment happens by entering the key sequence *CTRL-A X* in the development host console.

3.3 Adapting the OSELAS.BSP-Pengutronix-Generic-2014.07.0 Project

Handling a fully prepared PTXdist project is easy. But everything is fixed to the settings the developer selected. We now want to adapt the OSELAS.BSP-Pengutronix-Generic-2014.07.0 project in a few simple settings.

3.3.1 Working with Kconfig

Whenever we modify our project, PTXdist is using *Kconfig* to manipulate the settings. *Kconfig* means *kernel configurator* and was mainly developed to configure the Linux kernel itself. But it is easy to adapt, to use and so popular that more and more projects are using *Kconfig* for their purposes. PTXdist is one of them.

What is Kconfig

It is a user interface to select given resources in a convenient way. The resources that we can select are given in simple text files. It uses a powerful "language" in these text files to organize them in a hierarchical manner, solves challenges like resource dependencies, supports help and search features. PTXdist uses all of these features. *Kconfig* supports a text based user interface by using the *ncurses* library to manipulate the screen content and should work on nearly all host systems.

For example running PTXdist's `menuconfig` subcommand in this way

```
$ ptxdist menuconfig
```

will show the following console output

Navigate in Kconfig menu (select, search, ...)

To navigate through the configuration tree, we are using the arrow keys. Up and down navigates vertically in the menu entries. Right and left navigates between *Select*, *Exit* and *Help* (in the bottom part of our visual screen).

To enter one of the menus, we navigate to this entry to highlight it and press the *Enter* key. To leave it, we select *Exit* and press the *Enter* key again. There are shortcuts available, instead of pressing the *Enter* key to enter a menu we also can press *alt-s* and to leave a menu *alt-e*. Also an ESC double hit leaves any menu we are in.

To select a menu entry, we use the *Space* key. This will toggle the selection. Or, to be more precise and faster, we use the key *y* to select an entry, and key *n* to deselect it.

To get help for a specific menu topic, we navigate vertically to highlight it and horizontally to select the *Help* entry. Then we can press *Enter* to see the help.

To search for specific keywords, we press the */* key and enter a word. *Kconfig* then lists all occurrences of this word in all menus.

Meaning of visual feedbacks in Kconfig

- Submenus to enter are marked with a trailing `--->`
Note: Some submenus are also marked with a leading bracket `[]`. To enter them we first must select/enable them `[*]`
- Entries with a list of selectable alternatives are also marked with a trailing `--->`

```

----- Powered by PTXdist - http://www.pengutronix.de/software/ptxdist/ -----
Arrow keys navigate the menu. <Enter> selects submenus --->. Highlighted letters
are hotkeys. Pressing <Y> includes, <N> excludes, <M> modularizes features. Press
<Esc><Esc> to exit, <?> for Help, </> for Search. Legend: [*] built-in [ ] excluded
<M> module < > module capable

-----
[*] Project Name & Version      --->
----- Host Options -----
PTXdist Options              --->
Host Tools                   --->
Cross Tools                  --->
Debug Tools                  --->
-----
Root Filesystem              --->
Core (libc, locales)         --->
[ ] Core (initramfs)         --->
-----
Shell & Console Tools        --->
Scripting Languages          --->
Bytecode Engines / VMs      --->
Networking Tools             --->
Disk and File Utilities      --->
Communication Utilities      --->
Applications                 --->
Editors                      --->
System Libraries             --->
Middleware                   --->
Scientific Apps              --->
Web Applications             --->
Test Suites                  --->
-----
. (+)-----

<Select>  < Exit >  < Help >

```

Figure 3.3: Main userland configuration menu

- Entries we can select are marked with a leading empty bracket []
- Entries that are already selected are marked with a leading filled bracket [*]
- Entries that are selected due to dependencies into other selected entries are marked with a leading --*
- Some entries need a free text to enter, they are marked with leading brackets () and the free text in it

Menus and submenus in Kconfig (sectioning)

There are dozens of entries in the PTXdist configuring menus. To handle them, they are divided and separated into logical units.

The main building blocks in the *userland configuration* menu are:

- Host Options: Some parts of the project are build host relevant only. For example PTXdist can build the DDD debugger to debug applications running on the target.
- Root Filesystem: Settings to arrange target's root filesystem and to select the main C runtime library
- Applications: Everything we like to run on your target.

The main building blocks in the *platform configuration* menu are:

- Architecture: Basic settings, like the main and sub architecture the target system uses, the toolchain to be used to build everything and some other architecture dependent settings.

- Linux kernel: Which kernel revision and kernel configuration should be used
- Bootloader: Which bootloader (if any) should be built in the project
- The kind of image to populate a root filesystem into the target system

The main building blocks in the *board setup configuration* menu are:

- Network: Network settings for the target
- Host: Host setup to be able to reach the target system

At this point it could be useful to walk to the whole menus and their submenus to get an idea about the amount of features and applications PTXdist currently supports.

3.3.2 Adapting Platform Settings

Some parts of the OSELAS.BSP-Pengutronix-Generic-2014.07.0 project are platform specific (in contrast to the userland configuration that could be shared between platforms). We now want to change the used Linux kernel of our current i586-qemu platform. It comes with a default linux-3.0 and we want to change it to a more recent linux-3.7.

To do so, we run:

```
$ ptxdist menuconfig platform
```

In this Kconfig dialogue we navigate to the entry:

```
[*] Linux kernel --->
    (3.0) kernel version
```

and replace the 3.0 value by the 3.7 value.

Since PTXdist checks the MD5 sums of the archives it uses, we also must change the MD5 sum in the menu entry according to the selected kernel version.

Use one of the following MD5 sums for a kernel of your choice:

- 3.7: 21223369d682bcf44bcdfe1521095983
- 3.6: 1a1760420eac802c541a20ab51a093d1
- 3.5: 24153eaaa81dedc9481ada8cd9c3b83d
- 3.4: 967f72983655e2479f951195953e8480
- 3.3: 7133f5a2086a7d7ef97abac610c094f5
- 3.2: 364066fa18767ec0ae5f4e4abcf9dc51
- 3.1: 8d43453f8159b2332ad410b19d86a931
- 3.0: 398e95866794def22b12dfbc15ce89c0
- 2.6.39: 1aab7a741abe08d42e8eccf20de61e05
- 2.6.38: 7d471477bfa67546f902da62227fa976
- 2.6.37: c8ee37b4fdccdb651e0603d35350b434

Now we can leave the menu and save the new settings.

A Linux kernel needs a configuration for being built correctly. The OSELAS.BSP-Pengutronix-Generic-2014.07.0 project comes with a prepared configuration in the file `configs/i586-qemu/kernelconfig-3.0` for the 3.0 kernel.

It is always a good idea to start with a known-to-work kernel configuration. So, for this example, we are using a different known-to-work kernel configuration in the `configs/i586-qemu/kernelconfig-3.7` file for our new 3.7 kernel.

3.3.3 Adapting Linux Kernel Settings

In this section we want to show how to change some Linux kernel settings of our OSELAS.BSP-Pengutronix-Generic-2014.07.0project.

First of all, we run

```
$ ptxdist menuconfig kernel
```

This command will start the kernel's Kconfig. For this example we want to enable USB host support in the kernel. To do so, we navigate to:

```
Device Drivers --->
  [ ] USB support --->
    < > Support for Host-side USB
    < > OHCI HCD support
```

Note: All the listed empty `[]` and `< >` above must be activated to get all submenu entries.

We leave the menu and save the new kernel configuration.

To start building a new kernel with the new configuration, we again run:

```
$ ptxdist go
```

This builds or re-builds the kernel, because we changed its settings.

Note: If nothing was changed, `ptxdist go` also will do nothing.

When PTXdist has finished its job, the new bootable kernel can be found at `platform-i586/images/linuximage`. To boot it again in the QEMU emulation, the hard disk image must be re-created with:

```
$ ptxdist images
$ ./configs/i586-qemu/run
```

The emulated system should now start with a 3.7 based kernel with USB support.

3.3.4 Adapting Userland Settings

After changing some platform and kernel settings, we are now reaching the most interesting area: Userland.

In the userland area we can enable and use all the applications and services PTXdist provides. Many of them are working out of the box when enabled and executed on the target side. Some need additional runtime configuration, but PTXdist comes with most common configurations for such packages.

In this simple example, we want to add the missing `head` command to our target's shell. Assuming we forgot to enable this command, we get:

```
$ ./configs/i586-qemu/run

ptx login: root
login[xxx]: root login on 'ttyS0'
root@ptx:~ head /etc/fstab
-sh: head: not found
```

To change this, we first run:

```
$ ptxdist menuconfig
```

The additional command we want to enable is provided by the *Busybox* package. So we navigate to:

```
Shell & Console Tools --->
  *- busybox --->
    Coreutils --->
      [ ] head
```

After activating the [] head entry, we leave the menu and save the new configuration.

Once again, a

```
$ ptxdist go
```

will build or re-build the busybox package due to its configuration change.

And also once again, after finishing its job, the following commands let us test the new command:

```
$ ptxdist images
$ ./configs/i586-qemu/run
```

Log in on the emulated system and simply check with a:

```
ptx login: root
login[xxx]: root login on 'ttyS0'
root@ptx:~ head /etc/fstab
#
# /etc/fstab
#
# special filesystems
proc /proc proc defaults 0 0
debugfs /sys/kernel/debug debugfs defaults,noauto 0 0
devpts /dev/pts devpts defaults 0 0
none /tmp tmpfs defaults,mode=1777,uid=0,gid=0 0 0
none /sys sysfs defaults 0 0
```


We are done now. These simple examples should give the users a quick feeling how things are working in PTXdist and how to modify them. Adapting this generic BSP to a different platform with nearly the same features as our reference platforms is possible with this knowledge.

But most of the time, a user needs more detailed adaptations to be able to fit all requirements of the new platform. At this point of time we are no longer ordinary users of PTXdist, we become developers now.

So, right now it's time to read the *PTXdist Developer's Manual*

4 PTXdist Developer's Manual

This chapter shows all (or most) of the details of how PTXdist works.

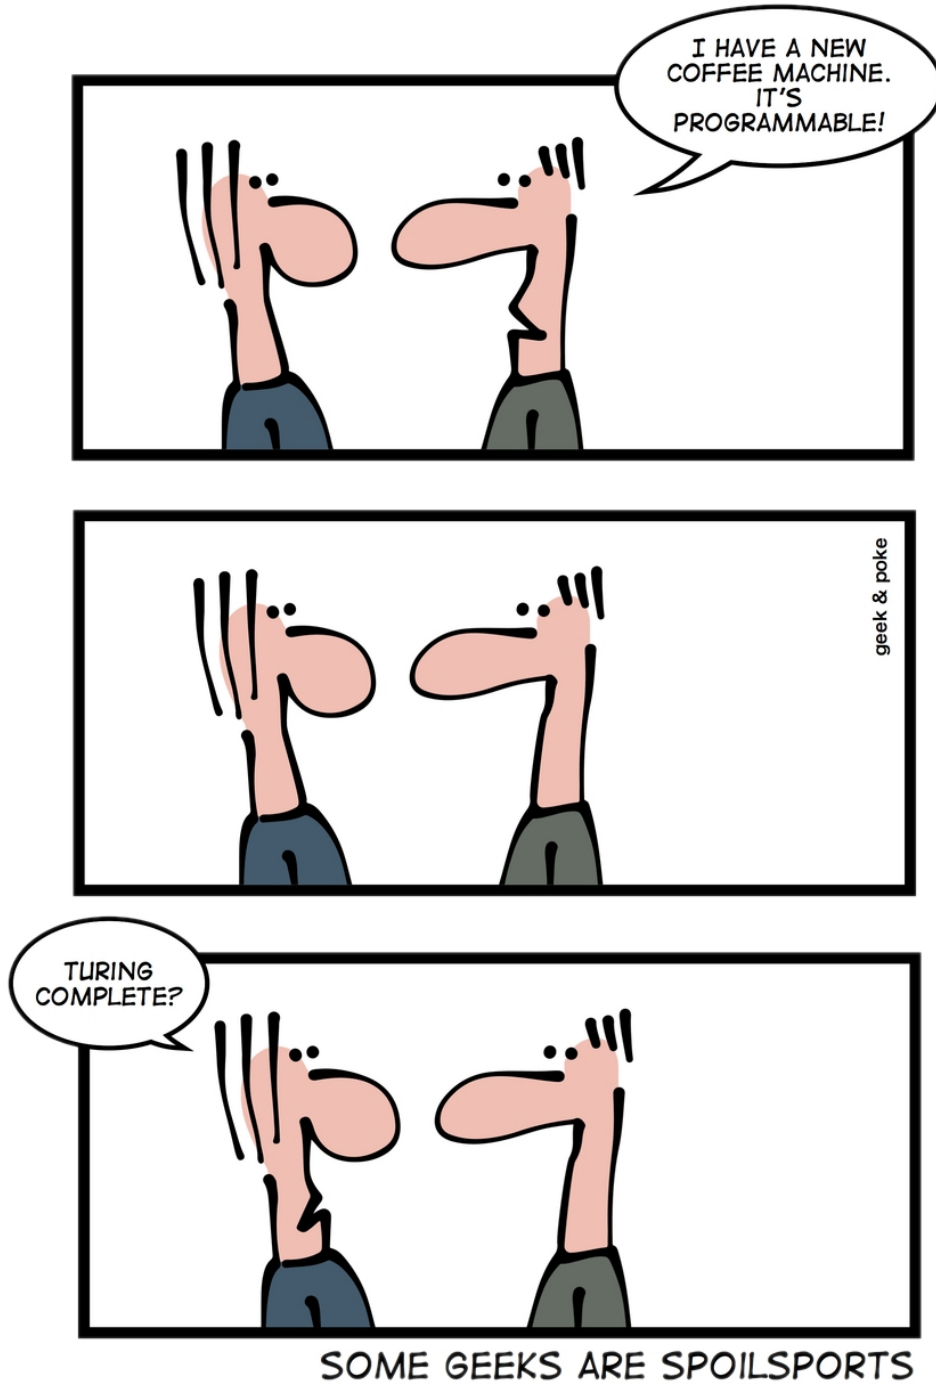

- where are the files stored that PTXdist uses when building packages
- how patching works
- where is PTXdist fetching a package's runtime configuration files from
- how to control a package's build stages
- how to add new packages

4.1 PTXdist's directory hierarchy

Note: Referenced directories are meant relative to the PTXdist main installation location (if not otherwise stated). If not configured differently, this main path is `/usr/local/lib/ptxdist-2014.07.0`

4.1.1 Rule Files

When building a single package, PTXdist needs the information on how to handle the package, i.e. on how to get it from the source up to what the target needs at runtime. This information is provided by a rule file per package.

PTXdist collects all rule files in its `rules/` directory. Whenever PTXdist builds something, all these rule files are scanned at once. These rule files are global rule files, valid for all projects. PTXdist uses a mechanism to be able to add or replace specific rule files on a per project base. If a `rules/` directory exists in the current project, its content is scanned too. These project local rule files are used in addition to the global rule files or – if they are using the same name as a global rule file – **replacing** the global rule file.

The replacing mechanism can be used to extend or adapt packages for specific project requirements. Or it can be used for bug fixing by backporting rule files from more recent PTXdist revisions to projects that are stuck to an older PTXdist revision for maintenance only.

4.1.2 Patch Series

There are many packages in the wild that are not cross build aware. They fail compiling some files, use wrong include paths or try to link against host libraries. To be successful in the embedded world, these types of failures must be fixed. If required, PTXdist provides such fixes per package. They are organized in *patch series* and can be found in the `patches/` directory within a subdirectory using the same name as the package itself.

PTXdist uses the utility `patch` or `quilt` to apply an existing patch series after extracting the archive. So, every patch series contains a set of patches and one `series` file to define the order in which the patches must be applied.

Note: Patches can be compressed.

Besides the `patches/` directory at the main installation location, PTXdist searches two additional locations for a patch series for the package in question.

One location is the project's currently used platform directory. If the currently used platform is located in `configs/i586-qemu`, PTXdist searches in `./configs/i586-qemu/patches/<package name>`.

If no patch series was found in the platform directory, the next location PTXdist it searches for a patch series is the main project directory in `./patches/<package name>`.

If both project local locations do not provide a patch series for the specific package, PTXdist falls back to the `patches/` directory at its main installation location.

This search order can be used to use specific patch series for specific cases.

- platform specific
- project specific
- common case
- bug fixing

The *bug fixing* case is used in accordance to a replacement of a rule file. If this was done due to a backport, and the more recent PTXdist revision does not only exchange the rule file but also the patch series, this mechanism ensures that both relevant parts can be updated in the project.

4.1.3 Runtime Configuration

Many packages are using runtime configuration files along with their executables and libraries. PTXdist provides default configuration files for the most common cases. These files can be found in the `generic/etc` directory and they are using the same names as the ones at runtime (and their install directory on the target side will also be `/etc`).

But some of these default configuration files are empty, due to the absence of a common case. The project must provide replacements of these files with a more useful content in every case where the (empty) default one does not meet the target's requirements.

PTXdist first searches the project local `./projectroot/etc` directory for a specific configuration file and falls back to use the default one if none exists locally.

A popular example is the configuration file `/etc/fstab`. The default one coming with PTXdist works for the most common cases. But if our project requires a special setup, we can just copy the default one to the local `./projectroot/etc/fstab`, modify it and we are done. The next time PTXdist builds the root filesystem it will use the local `fstab` instead of the global (default) one.

4.2 Adding new Packages

PTXdist provides a huge amount of applications sufficient for the most embedded use cases. But there is still need for some fancy new packages. This section describes the steps and the background on how to integrate new packages into the project.

At first a summary about possible application types which PTXdist can handle:

- **host type:** This kind of package is built to run on the build host. Most of the time such a package is needed if another target-relevant package needs to generate some data. For example the *glib* package depends on its own to create some data. But if it is compiled for the target, it can't do so. That's why a host *glib* package is required to provide these utilities runnable on the build host. It sounds strange to build a host package, even if on the build host such utilities are already installed. But this way ensures that there are no dependencies regarding the build host system.
- **target type:** This kind of package is built for the target.
- **cross type:** This kind of package is built for the build host, but creates architecture specific data for the target.
- **klibc type:** This kind of package is built against *klibc* to be part of an *initramfs* for the target.

- **src-autoconf-prog:** This kind of package is built for the target. It is intended for development, as it does not handle a released archive but a plain source project instead. Creating such a package will also create a small autotools based source template project on demand to give the developer an easy point to start. This template is prepared to build a single executable program.
- **src-autoconf-lib:** This kind of package is built for the target. It is intended for development, as it does not handle a released archive but a plain source project instead. Creating such a package will also create a small autotools/libtool based source template project on demand to give the developer an easy point to start. This template is prepared to build a single shared library. For further details refer section [6.10](#)
- **src-autoconf-proglib:** This kind of package is built for the target. It is intended for development, as it does not handle a released archive but a plain source project instead. Creating such a package will also create a small autotools/libtool based template project on demand to give the developer an easy point to start. This template is prepared to build a single shared library and a single executable program. The program will be linked against the shared library.
- **file:** This kind of package is intended to add a few simple files into the build process. We assume these files do not need any processing, they are ready to use and must only be present in the build process or at runtime (HTML files for example). Refer to the section [4.3](#) for further details on how to use it.
- **src-make-prog:** This kind of package is built for the target. It's intended for development, as it does not handle a released archive but a plain source project instead. Creating such a package will also create a simple makefile-based template project the developer can use as a starting point for development.
- **src-cmake-prog:** This kind of package is built for the target. It's intended for developments based on the *cmake* buildsystem. Various projects are using *cmake* instead of *make* and can be built with this package type. PTXdist will prepare it to compile sources in accordance to the target libraries and their settings. Creating such a package will also create a simple template project to be used as a starting point for development.
- **src-qmake-prog:** This kind of package is built for the target. It's intended for developments based on the *qmake* buildsystem. If the developer is going to develop a QT based application, this rule is prepared to compile sources in accordance to the target libraries and their settings. Creating such a package will also create a simple template project to be used as a starting point for development.
- **font:** This package is a helper to add X font files to the root filesystem. This package does not create an additional IPKG, instead it adds the font to the existing font IPKG. This includes the generation of the directory index files, required by the Xorg framework to recognize the font file.
- **src-linux-driver:** This kind of package builds an out of tree kernel driver. It also creates a driver template to give the developer an easy point to start.

4.2.1 Rule File Creation

To create such a new package, we create a project local `rules/` directory first. Then we run

```
$ ptxdist newpackage <package type>
```

If we omit the `<package type>`, PTXdist will list all available package types.

In our first example, we want to add a new target type archive package. When running the

```
$ ptxdist newpackage target
```

command, PTXdist asks a few questions about this package. This information is the basic data PTXdist must know about the package.

```
ptxdist: creating a new 'target' package:
ptxdist: enter package name.....: foo
ptxdist: enter version number.....: 1.1.0
ptxdist: enter URL of basedir.....: http://www.foo.com/download/src
ptxdist: enter suffix.....: tar.gz
ptxdist: enter package author.....: My Name <me@my-org.com>
ptxdist: enter package section....: project_specific
```

What we have to answer:

- **package name:** As this kind of package handles a source archive, the correct answer here is the basename of the archive's file name. If its full name is `foo-1.1.0.tar.gz`, then `foo` is the basename to enter here.
- **version number:** Most source archives are using a release or version number in their file name. If its full name is `foo-1.1.0.tar.gz`, then `1.1.0` is the version number to enter here.
- **URL of basedir:** This URL tells PTXdist where to download the source archive from the web (if not already done). If the full URL to download the archive is `http://www.foo.com/download/src/foo-1.1.0.tar.gz`, the basedir part `http://www.foo.com/download/src` is to be entered here.
- **suffix:** Archives are using various formats for distribution. PTXdist uses the *suffix* entry to select the matching extraction tool. If the archive's full name is `foo-1.1.0.tar.gz`, then `tar.gz` is the suffix to enter here.
- **package author:** If we intend to contribute this new package to PTXdist mainline, we should add our name here. This name will be used in the copyright note of the rule file and will also be added to the generated `ipkg`. When you run `ptxdist setup` prior to this call, you can enter your name and your email address, so PTXdist will use it as the default (very handy if you intend to add many new packages).
- **package section:** We can enter here the menu section name where our new package menu entry should be listed. In the first step we can leave the default name unchanged. It's a string in the menu file only, so changing it later on is still possible.

4.2.2 Make it Work

Generating the rule file is only one of the required steps to get a new package. The next steps to make it work are to check if all stages are working as expected and to select the required parts to get them installed in the target root filesystem. Also we must find a reasonable location where to add our new menu entry to configure the package.

The generated skeleton starts to add the new menu entry in the main configure menu (if we left the section name unchanged). Running `ptxdist menuconfig` will show it on top of all other menus entries.



To be able to implement and test all the other required steps for adding a new package, we first must enable the package for building. (Fine tuning the menu can happen later on.)

The rule file skeleton still lacks some important information. Let's take a look into some of the top lines of the generated rule file `./rules/foo.make`:

```
FOO_VERSION      := 1.1.0
FOO_MD5          :=
FOO              := foo-$(FOO_VERSION)
```

```

FOO_SUFFIX      := tar.gz
FOO_URL         := http://www.foo.com/download/src/${FOO}.${FOO_SUFFIX}
FOO_SOURCE      := ${SRCDIR}/${FOO}.${FOO_SUFFIX}
FOO_DIR         := ${BUILDDIR}/${FOO}
FOO_LICENSE     := unknown

```

We can find these lines with different content in most or all of the other rule files PTXdist comes with. Up to the underline character is always the package name and after the underline character is always PTXdist specific. What does it mean:

- *_VERSION brings in the version number of the release and is used for the download and IPKG/OPKG package generation.
- *_MD5 to be sure the correct package has been downloaded, PTXdist checks the given MD5 sum against the archive content. If both sums do not match, PTXdist rejects the archive and fails the currently running build.
- *_SUFFIX defines the archive type, to make PTXdist choosing the correct extracting tool.
- *_URL defines the full qualified URL into the web for download. If alternative download locations are known, they can be listed in this variable, delimiter character is the space.
- *_DIR points to the directory this package will be build later on by PTXdist
- *_LICENSE enables the user to get a list of licenses she/he is using in her/his project (licenses of the enabled packages).

After enabling the menu entry, we can start to check the *get* and *extract* stages, calling them manually one after another.

Note: The shown commands below expect that PTXdist downloads the archives to a global directory named `global_src`. This is not the default setting, but we recommend to use a global directory to share all archives between PTXdist based projects. Advantage is every download happens only once. Refer to the setup command PTXdist provides.

```

$ ptxdist get foo

-----
target: foo-1.1.0.tar.gz
-----

--2009-12-21 10:54:45-- http://www.foo.com/download/src/foo-1.1.0.tar.gz
Length: 291190 (284K) [application/x-gzip]
Saving to: '/global_src/foo-1.1.0.tar.gz.XXXX0GncZA'

100%[=====>] 291,190    170K/s   in 1.7s

2009-12-21 10:54:48 (170 KB/s) - '/global_src/foo-1.1.0.tar.gz' saved [291190/291190]

```

This command should start to download the source archive. If it fails, we should check our network connection, proxy setup or if the given URL in use is correct.

Note: Sometimes we do not know the content of all the other variables in the rule file. To get an idea what content a variable has, we can ask PTXdist about it:

```

$ ptxdist print FOO_URL
http://www.foo.com/download/src/foo-1.1.0.tar.gz

```

The next step would be to extract the archive. But as PTXdist checks the MD5 sum in this case, this step will fail, because the FOO_MD5 variable is still empty. Let's fill it:

```
$ md5sum /global_src/foo-1.1.0.tar.gz
9a09840ab775a139ebb00f57a587b447
```

This string must be assigned to the FOO_MD5 in our new foo.make rule file:

```
FOO_MD5      := 9a09840ab775a139ebb00f57a587b447
```

We are now prepared for the next step:

```
$ ptxdist extract foo

-----
target: foo.extract
-----

extract: archive=/global_src/foo-1.1.0.tar.gz
extract: dest=/home/jbe/my_new_prj/build-target
PATCHIN: packet=foo-1.1.0
PATCHIN: dir=/home/jbe/my_new_prj/build-target/foo-1.1.0
PATCHIN: no patches for foo-1.1.0 available
Fixing up /home/jbe/my_new_prj/build-target/foo-1.1.0/configure
finished target foo.extract
```

In this example we expect an autotoolized source package. E.g. to prepare the build, the archive comes with a configure script. This is the default case for PTXdist. So, there is no need to modify the rule file and we can simply run:

```
$ ptxdist prepare foo

-----
target: foo.prepare
-----

[...]

checking build system type... i686-host-linux-gnu
checking host system type... i586-unknown-linux-gnu
checking whether to enable maintainer-specific portions of Makefiles... no
checking for a BSD-compatible install... /usr/bin/install -c
checking whether build environment is sane... yes
checking for a thread-safe mkdir -p... /bin/mkdir -p
checking for gawk... gawk
checking whether make sets $(MAKE)... yes
checking for i586-unknown-linux-gnu-strip... i586-unknown-linux-gnu-strip
checking for i586-unknown-linux-gnu-gcc... i586-unknown-linux-gnu-gcc
checking for C compiler default output file name... a.out

[...]

configure: creating ./config.status
config.status: creating Makefile
config.status: creating ppa_protocol/Makefile
config.status: creating config.h
```

```
config.status: executing depfiles commands
finished target foo.prepare
```

At this stage things can fail:

- A wrong or no MD5 sum was given
- The configure script is not cross compile aware
- The package depends on external components (libraries for example)

If the configure script is not cross compile aware, we are out of luck. We must patch the source archive in this case to make it work. Refer to section 4.2.6 on how to use PTXdist's features to simplify this task.

If the package depends on external components, these components might be already part of PTXdist. In this case we just have to add this dependency into the menu file and we are done. But if PTXdist cannot fulfill this dependency, we also must add it as a separate package first.

If the *prepare* stage has finished successfully, the next step is to compile the package.

```
$ ptxdist compile foo

-----
target: foo.compile
-----

make[1]: Entering directory '/home/jbe/my_new_prj/build-target/foo-1.1.0'
make all-recursive
make[2]: Entering directory '/home/jbe/my_new_prj/build-target/foo-1.1.0'
make[3]: Entering directory '/home/jbe/my_new_prj/build-target/foo-1.1.0'

[...]

make[3]: Leaving directory '/home/jbe/my_new_prj/build-target/foo-1.1.0'
make[2]: Leaving directory '/home/jbe/my_new_prj/build-target/foo-1.1.0'
make[1]: Leaving directory '/home/jbe/my_new_prj/build-target/foo-1.1.0'
finished target foo.compile
```

At this stage things can fail:

- The build system is not cross compile aware (it tries to execute just created target binaries for example)
- The package depends on external components (libraries for example) not detected by configure
- Sources are ignoring the endianness of some architectures or using header files from the build host system (from `/usr/include` for example)
- The linker uses libraries from the build host system (from `/usr/lib` for example) by accident

In all of these cases we must patch the sources to make them work. Refer to section 4.2.4 on how to use PTXdist's features to simplify this task.

In this example we expect the best case: Everything went fine, even for cross compiling. So, we can continue with the next stage: *install*

```
$ ptxdist install foo

-----
target: foo.install
```

```

-----
make[1]: Entering directory '/home/jbe/my_new_prj/build-target/foo-1.1.0'
make[2]: Entering directory '/home/jbe/my_new_prj/build-target/foo-1.1.0'
make[3]: Entering directory '/home/jbe/my_new_prj/build-target/foo-1.1.0'
test -z "/usr/bin" /bin/mkdir -p "/home/jbe/my_new_prj/build-target/foo-1.1.0/usr/bin"
  /usr/bin/install -c 'foo' '/home/jbe/my_new_prj/build-target/foo-1.1.0/usr/bin/foo'
make[3]: Leaving directory '/home/jbe/my_new_prj/build-target/foo-1.1.0'
make[2]: Leaving directory '/home/jbe/my_new_prj/build-target/foo-1.1.0'
make[1]: Leaving directory '/home/jbe/my_new_prj/build-target/foo-1.1.0'
finished target foo.install

-----

target: foo.install.post

-----

finished target foo.install.post

```

This *install* stage does not install anything to the target root filesystem. It is mostly intended to install libraries and header files other programs should link against later on.

The last stage – *targetinstall* – is the one that defines the package's components to be forwarded to the target's root filesystem. Due to the absence of a generic way, this is the task of the developer. So, at this point of time we must run our favourite editor again and modify our new rule file `./rules/foo.make`.

The skeleton for the *targetinstall* stage looks like this:

```

# -----
# Target-Install
# -----

$(STATEDIR)/foo.targetinstall:
    @$(call targetinfo)

    @$(call install_init, foo)
    @$(call install_fixup, foo,PACKAGE,foo)
    @$(call install_fixup, foo,PRIORITY,optional)
    @$(call install_fixup, foo,VERSION,$(FOO_VERSION))
    @$(call install_fixup, foo,SECTION,base)
    @$(call install_fixup, foo,AUTHOR,"My Name <me@my-org.com>")
    @$(call install_fixup, foo,DEPENDS,)
    @$(call install_fixup, foo,DESCRIPTION,missing)

    @$(call install_copy, foo, 0, 0, 0755, $(FOO_DIR)/foobar, /dev/null)

    @$(call install_finish, foo)
    @$(call touch)

```

The "header" of this stage defines some information IPKG needs. The important part that we must modify is the call to the `install_copy` macro (refer to section 5.2 for more details about this kind of macros). This call instructs PTXdists to include the given file (with PID, UID and permissions) into the IPKG, which means to install this file to the target's root filesystem.

From the previous *install* stage we know this package installs an executable called `foo` to location `/usr/bin`. We can do the same for our target by changing the *install_copy* line to:

```
@$(call install_copy, foo, 0, 0, 0755, $(FOO_DIR)/foo, /usr/bin/foo)
```

To check it, we just run:

```
$ ptxdist targetinstall foo

-----
target: foo.targetinstall
-----

install_init:  preparing for image creation...
install_init:  @ARCH@ -> i386 ... done
install_init:  preinst not available
install_init:  postinst not available
install_init:  prerm not available
install_init:  postrm not available
install_fixup: @PACKAGE@ -> foo ... done.
install_fixup: @PRIORITY@ -> optional ... done.
install_fixup: @VERSION@ -> 1.1.0 ... done.
install_fixup: @SECTION@ -> base ... done.
install_fixup: @AUTHOR@ -> "My Name <me@my-org.com>" ... done.
install_fixup: @DESCRIPTION@ -> missing ... done.
install_copy:
  src=/home/jbe/my_new_prj/build-target/foo-1.1.0/foo
  dst=/usr/bin/foo
  owner=0
  group=0
  permissions=0755
xpkg_finish:  collecting license (unknown) ... done.
xpkg_finish:  creating ipkg package ... done.
finished target foo.targetinstall

-----
target: foo.targetinstall.post
-----

finished target foo.targetinstall.post
```

After this command, the target's root filesystem contains a file called `/usr/bin/foo` owned by root, its group is also root and everyone has execution permissions, but only the user root has write permissions.

One last task of this port is still open: A reasonable location for the new menu entry in PTXdist's menu hierarchy. PTXdist arranges its menus on the meaning of each package. Is it a network related tool? Or a scripting language? Or a graphical application?

Each of these global meanings have their own submenu, where we can add our new entry to. We just have to edit the head of our new menu file `./rules/foo.in` to add it to a specific global menu. If our new package is a network related tool, the head of the menu file should look like:

```
## SECTION=networking
```

We can grep through the other menu files from the PTXdist main installation `rules/` directory to get an idea what section names are available:

```
rules/ $ find . -name *.in | xargs grep "## SECTION"
./acpid.in:## SECTION=shell_and_console
./alsa-lib.in:## SECTION=system_libraries
./alsa-utils.in:## SECTION=multimedia_sound
./apache2.in:## SECTION=networking
```



```
./apache2_mod_python.in:## SECTION=networking
[...]
./klibc-module-init-tools.in:## SECTION=initramfs
./xkeyboard-config.in:## SECTION=multimedia_xorg_data
./xorg-app-xev.in:## SECTION=multimedia_xorg_app
./xorg-app-xrandr.in:## SECTION=multimedia_xorg_app
./host-eggdbus.in:## SECTION=hosttools_noprompt
./libssh2.in:## SECTION=networking
```

Porting a new package to PTXdist is finished now.

To check it right away, we simply run these two commands:

```
$ ptxdist clean foo
rm -rf /home/jbe/my_new_prj/state/foo.*
rm -rf /home/jbe/my_new_prj/packages/foo_*
rm -rf /home/jbe/my_new_prj/build-target/foo-1.1.0
$ ptxdist targetinstall foo

[...]
```

4.2.3 Advanced Rule Files

The previous example on how to create a rule file sometimes works as shown above. But most of the time source archives are not that simple. In this section we want to give the user a more detailed selection how the package will be built.

Adding Static Configure Parameters

The configure scripts of various source archives provide additional parameters to enable or disable features, or to configure them in a specific way.

We assume the configure script of our foo example (refer to section 4.2.1) supports two additional parameters:

- **--enable-debug**: Make the program more noisy. It's disabled by default.
- **--with-bar**: Also build the special executable **bar**. Building this executable is also disabled by default.

We now want to forward these options to the configure script when it runs in the *prepare* stage. To do so, we must again open the rule file with our favourite editor and navigate to the *prepare* stage entry.

PTXdist uses the variable `FOO_AUTOCONF` as the list of parameters to be given to configure.

Currently this variable is commented out and defined to:

```
# FOO_AUTOCONF := $(CROSS_AUTOCONF_USR)
```

The variable `CROSS_AUTOCONF_USR` is predefined by PTXdist and contains all basic parameters to instruct configure to prepare for a **cross** compile environment.

To use the two additional mentioned configure parameters, we comment in this line and supplement this expression as follows:

```
FOO_AUTOCONF := $(CROSS_AUTOCONF_USR) \
    --enable-debug \
    --with-bar
```

Note: We recommend to use this format with each parameter on a line of its own. This format is easier to read and a diff shows more exactly any change.

To do a fast check if this addition was successful, we run:

```
$ ptxdist print FOO_AUTOCONF
--prefix=/usr --sysconfdir=/etc --host=i586-unknown-linux-gnu --build=i686-host-linux-gnu --enable-
debug --with-bar
```

Note: It depends on the currently selected platform and its architecture what content this variable will have. The content shown above is an example for an x86 target.

Or re-build the package with the new settings:

```
$ ptxdist drop foo prepare
$ ptxdist targetinstall foo
```

Adding Dynamic Configure Parameters

Sometimes it makes sense to add this kind of parameters on demand only; especially a parameter like `--enable-debug`. To let the user decide if this parameter is to be used or not, we must add a menu entry. So, let's expand our menu. Here is its current content:

```
## SECTION=project_specific

config FOO
    tristate
    prompt "foo"
    help
    FIXME
```

We'll add two menu entries, one for each optional parameter we want to add on demand to the configure parameters:

```
## SECTION=project_specific

config FOO
    tristate
    prompt "foo"
    help
    FIXME

if FOO
config FOO_DEBUG
    bool
    prompt "add debug noise"

config FOO_BAR
    bool
    prompt "build bar"

endif
```

Note: To extend the base name by a suboption name as a trailing component gives PTXdist the ability to detect a change in the package's settings to force its rebuild.

To make usage of the new menu entries, we must check them in the rule file and add the correct parameters:

```
#
# autoconf
#
FOO_AUTOCONF := $(CROSS_AUTOCONF_USR)

ifdef PTXCONF_FOO_DEBUG
FOO_AUTOCONF += --enable-debug
else
FOO_AUTOCONF += --disable-debug
endif

ifdef PTXCONF_FOO_BAR
FOO_AUTOCONF += --with-bar
else
FOO_AUTOCONF += --without-bar
endif
```



Please note the trailing `PTXCONF_` for each define. While Kconfig is using `FOO_BAR`, the rule file must use `PTXCONF_FOO_BAR` instead.

It is a good practice to add both settings, e.g. `--disable-debug` even if this is the default case. Sometimes configure tries to guess something and the binary result might differ depending on the build order. For example some kind of package would also build some X related tools, if X libraries are found. In this case it depends on the build order, if the X related tools are built or not. All the autocheck features are problematic here. So, if we do not want configure to guess its settings we **must disable everything we do not want**.

Since every optional parameter adds four lines of code to the rule files, PTXdist provides some shortcuts to handle it. Refer to section 5.2.11 for further details.

With these special macros in use, the file content shown above looks much simpler:

```
#
# autoconf
#
FOO_AUTOCONF := $(CROSS_AUTOCONF_USR) \
    $(call ptx/endis, PTXCONF_FOO_DEBUG)-debug \
    $(call ptx/wwo, PTXCONF_FOO_BAR)-bar
```

If some parts of a package are built on demand only, they must also be installed on demand only. Besides the *prepare* stage, we also must modify our *targetinstall* stage:

```
[...]

    @$(call install_copy, foo, 0, 0, 0755, $(FOO_DIR)/foo, /usr/bin/foo)

ifdef PTXCONF_FOO_BAR
    @$(call install_copy, foo, 0, 0, 0755, $(FOO_DIR)/bar, /usr/bin/bar)
endif

    @$(call install_finish, foo)
    @$(call touch)

[...]
```

Now we can play with our new menu entries and check if they are working as expected:

```
$ ptxdist menuconfig
$ ptxdist targetinstall foo
```

Whenever we change a *FOO* related menu entry, PTXdist should detect it and re-build the package when a new build is started.

Managing External Compile Time Dependencies

While running the prepare stage, it could happen that it fails due to a missing external dependency.

For example:

```
[...]
checking whether zlib exists...failed
```

In this example, our new package depends on the compression library *zlib*. PTXdist comes with a target *zlib*. All we need to do in this case is to declare that our new package *foo* depends on *zlib*. This kind of dependencies is managed in the menu file of our new package by simply adding the `select ZLIB` line. After this addition our menu file looks like:

```
## SECTION=project_specific

config FOO
    tristate
    select ZLIB
    prompt "foo"
    help
        FIXME

if FOO
config FOO_DEBUG
    bool
    prompt "add debug noise"

config FOO_BAR
    bool
    prompt "build bar"

endif
```

PTXdist now builds the *zlib* first and our new package thereafter.

Managing External Compile Time Dependencies on Demand

It is good practice to add only those dependencies that are really required for the current configuration of the package. If the package provides the features *foo* and *bar* and its `configure` provides switches to enable/disable them independently, we can also add dependencies on demand. Let's assume feature *foo* needs the compression library *libz* and *bar* needs the XML2 library *libxml2*. These libraries are only required at runtime if the corresponding feature is enabled. To add these dependencies on demand, the menu file looks like:

```

## SECTION=project_specific

config F00
    tristate
    select ZLIB if F00_F00
    select LIBXML2 if F00_BAR
    prompt "foo"
    help
        FIXME

if F00
config F00_DEBUG
    bool
    prompt "add debug noise"

config F00_F00
    bool
    prompt "build foo"

config F00_BAR
    bool
    prompt "build bar"

endif

```



Do not add these select statements to the correspondig menu entry. They must belong to the main menu entry of the package to ensure that the calculation of the dependencies between the packages is done in a correct manner.

Managing External Runtime Dependencies

Some packages are building all of their components and also installing them into the target's sysroot. But only their *targetinstall* stage decides which parts are copied to the root filesystem. So, compiling and linking of our package will work, because everything required is found in the target's sysroot.

In our example there is a hidden dependency to the math library `libm`. Our new package was built successfully, because the linker was able to link our binaries against the `libm` from the toolchain. But in this case the `libm` must also be available in the target's root filesystem to fulfil the runtime dependency: We have to force PTXdist to install `libm`. `libm` is part of the *glibc* package, but is not installed by default (to keep the root filesystem small). So, it **does not** help to select the `GLIBC_M` symbol, to get a `libm` at runtime.

The correct solution here is to add a `select LIBC_M` to our menu file. With all the additions above it now looks like:

```

## SECTION=project_specific

config F00
    tristate
    select ZLIB if F00_F00
    select LIBXML2 if F00_BAR
    select LIBC_M
    prompt "foo"

```

```

    help
    FIXME

if FOO
config FOO_DEBUG
    bool
    prompt "add debug noise"

config FOO_FOO
    bool
    prompt "build foo"

config FOO_BAR
    bool
    prompt "build bar"

endif

```

Note: There are other packages around, that do not install everything by default. If our new package needs something special, we must take a look into the menu of the other package how to force the required components to be installed and add the corresponding selects to our own menu file. In this case it does not help to enable the required parts in our project configuration, because this has no effect on the build order!

Managing Non Autotool Packages

Many packages are still coming with a plain Makefile. The user has to adapt it to make it work in a cross compile environment as well. PTXdist can also handle this kind of packages. We only have to specify a special *prepare* and *compile* stage.

Such packages often have no special need for any kind of preparation. We can omit this stage by defining this empty rule:

```

$(STATEDIR)/foo.prepare:
    @$(call targetinfo)
    @$(call touch)

```

To compile the package, we can use make's feature to overwrite variables used in the Makefile. With this feature we can still use the original Makefile but with our own (cross compile) settings.

Most of the time the generic compile rule can be used, only a few settings are required. To use only make instead of the autotools, we must instruct PTXdist to not use them by defining:

```

FOO_CONF_TOOL := NO

```

make will be called in this case with:

```

cd $(FOO_DIR) && $(FOO_MAKE_ENV) $(MAKE) $(FOO_MAKE_OPT)

```

So, in the rule file only the two variables `FOO_MAKE_ENV` and `FOO_MAKE_OPT` must be set, to forward the required settings to the package's buildsystem. If the package cannot be built in parallel, we can also add the `FOO_MAKE_PAR := NO`. YES is the default.

Note: `FOO` is still the name of our example package. It must be replaced by the real package name.

4.2.4 Patching Packages

There can be various reasons why a package must be patched:

- Package is broken for cross compile environments
- Package is broken within a specific feature
- Package is vulnerable and needs some fixes
- or anything else (this case is the most common one)

PTXdist handles patching automatically. After extracting the archive, PTXdist checks for the existence of a patch directory with the same name as the package. If our package's name is `foo-1.1.0`, PTXdist searches for patches in:

1. `project (./patches/foo-1.1.0)`
2. `platform (./configs/i586-qemu/patches/foo-1.1.0)`
3. `ptxdist (<ptxdist/installation/path>/patches/foo-1.1.0)`

The patches from the first location found are used. Note: Due to this search order, a PTXdist project can replace global patches from the PTXdist installation. This can be useful if a project sticks to a specific PTXdist revision but fixes from a more recent revision of PTXdist should be used.

4.2.5 Creating Patches for a Package

PTXdist uses the utilities `git`, `patch` or `quilt` to work with patches or patch series. We recommend `quilt`, as it can manage patch series in a very easy way. For this manual we assume `quilt` is installed on the build host.

Creating a Patch Series for a Package

To create a patch series for the first time, we can run the following steps. We are still using our `foo-1.1.0` example package here:

We create a special directory for the patch series in the local project directory:

```
$ mkdir -p patches/foo-1.1.0
```

PTXdist expects a `series` file in the patch directory and at least one patch. Otherwise it fails. Due to the fact that we do not have any patch content yet, we'll start with a dummy entry in the series file and an empty patch file.

```
$ touch patches/foo-1.1.0/dummy
$ echo dummy > patches/foo-1.1.0/series
```

Next is to extract the package (if already done, we must remove it first):

```
$ ptxdist extract foo
```

This will extract the archive and create a symbolic link in the build directory pointing to our local patch directory. Working this way will ensure that we do not lose our created patches if we enter `ptxdist clean foo` by accident. In our case the patches are still present in `patches/foo-1.1.0` and can be used the next time we extract the package again.

All we have to do now is to do the modification we need to make the package work. We change into the build directory and use *quilt* to create new patches, add files to respective patches, modify these files and refresh the patches to save our changes.

We recommend this way when modifying source files. But this way is improper when an autotools based buildsystem itself needs modifications. Refer to section 4.2.6 on how PTXdist can handle this special task.

Adding more Patches to a Package

If we want to add more patches to an already patched package, we can use nearly the same way as creating patches for the first time. But if the patch series comes from the PTXdist main installation, we do not have write permissions to these directories (do NEVER work on the main installation directories, NEVER, NEVER, NEVER). Due to the search order in which PTXdist searches for patches for a specific package, we can copy the global patch series to our local project directory. Now we have the permissions to add more patches or modify the existing ones. Also *quilt* is our friend here to manage the patch series.

If we think that our new patches are valuable also for others, or they fix an error, it could be a good idea to send these patches to PTXdist mainline.

4.2.6 Modifying Autotoolized Packages

Autotoolized packages are very picky when automatically generated files get patched. The patch order is very important in this case and sometimes it even fails and nobody knows why.

To improve a package's autotools-based build system, PTXdist comes with its own project local autotools to regenerate the autotools template files, instead of patching them. With this feature, only the template files must be patched, the required configure script and the Makefile.in files are regenerated in the final stages of the *prepare* step.

This feature works like the regular patching mechanism. The only difference is the additional *autogen.sh* file in the patch directory. If it exists and has execution permissions, it will be called after the package was patched (while the *extract* stage is running).

Its content depends on developer needs; for the most simple case the content can be:

```
#!/bin/bash

aclocal $ACLOCAL_FLAGS

libtoolize \
    --force \
    --copy

autoreconf \
    --force \
    --install \
    --warnings=cross \
    --warnings=syntax \
    --warnings=obsolete \
    --warnings=unsupported
```

Note: In this way not yet autotoolized package can be autotoolized. We just have to add the common autotool template files (*configure.ac* and *Makefile.am* for example) via a patch series to the package source and the *autogen.sh* to the patch directory.

4.3 Adding binary only Files

Sometimes a few binary files have to be added into the root filesystem. Or - to be more precise - some files, that do not need to be built in any way.

On the other hand, sometimes files should be included that are not covered by any open source license and so, should not be shipped in the source code format.

PTXdist provides more than one way to add such type of data files to the root filesystem it creates. The examples in this chapter refer our generic board support package. It comes with an example how to add binary only files into PTXdist's build mechanism.

4.3.1 Old style - single files

The old style to add a simple file is present in PTXdist since its early days: Just use the `install_copy` macro in the *targetinstall* stage in your own customized rules file.

```
@$(call install_copy, binary_example, 0, 0, 0644, \
$(PTXDIST_WORKSPACE)/local_src/binary_example/ptx_logo.png, \
/example/ptx_logo.png)
```

The example above is from the file `rules/binary_inst.make` from Pengutronix's generic BSP. It copies the file `ptx_logo.png` from within the BSP's directory `local_src/binary_example` to target's root filesystem. Refer [5.2.4](#) for further information about using the `install_copy` macro.

The disadvantage of this method is: If we want to install more than one file, we need one call to the `install_copy` macro per file. This is even harder if not only a set of files is to be installed, but a whole directory tree with files instead.

4.3.2 New style - using archives

If a whole tree of files is to be installed, working with a `tar` based archive could make life easier. In this case the archive itself provides all the required information the files are needing to be installed in a correct manner:

- the file itself and its name
- the directory structure and the final location of every file in this structure
- user and group ID on a per file base

```
@$(call install_archive, binary_example, -, -, \
$(PTXDIST_WORKSPACE)/local_src/archive_example/pictures.tgz, \
/)
```

The example shown above is from the file `rules/binary_inst.make` from Pengutronix's generic BSP. It extracts the archive `pictures.tgz` from within the BSP's directory `local_src/archive_example` to target's root filesystem. Refer [5.2.9](#) for further information about using the `install_archive` macro.

Using an archive can be useful to install parts of the root filesystem that are not covered by any open source license. It's possible to ship the binaries within the regular BSP, without the need for their sources. However it is possible for the customer to re-create everything required from the BSP to get their target up and running again.

Another use case for the archive method could be the support for different development teams. One team provides a software component in the archive format, the other team does not need to build it but can use it in the same way than every other software component.

4.3.3 Creating a Rules File

To get a rules and menu file we can copy the one from the generic BSP, or we let PTXdist create them for us.

```
$ ptxdist newpackage file
ptxdist: creating a new 'file' package:
ptxdist: enter package name.....: my_binfiles
ptxdist: enter version number.....: 1
ptxdist: enter package author.....: Juergen Borleis <jbe@pengutronix.de>
ptxdist: enter package section....: rootfs
```

Now two new files are present in the BSP:

1. rules/my_binfiles.in The template for the menu
2. rules/my_binfiles.make The rules template




Both files now must be customized to meet our requirements. Due to the answer *rootfs* to the "enter package section" question, we will find the new menu entry in:

```
Root Filesystem --->
  < > my_binfiles (NEW)
```

Enabling this new entry will also run our stages in rules/my_binfiles.make the next time we enter:

```
$ ptxdist go
```

5 PTXdists Reference

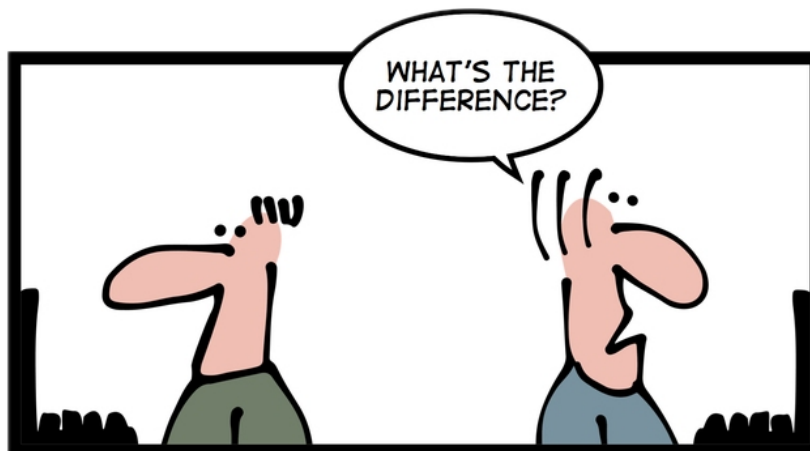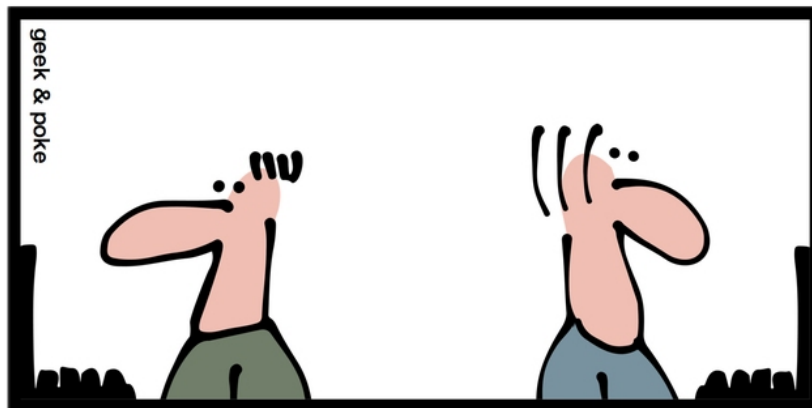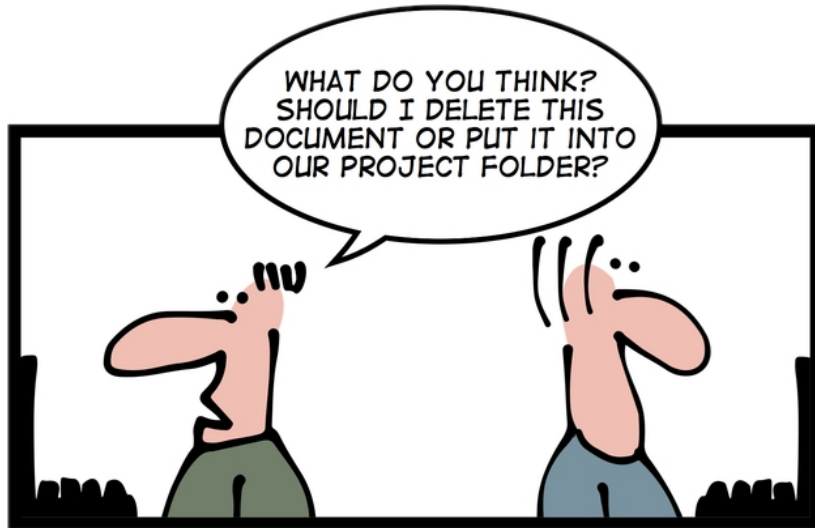

5.1 Variables Reference

The following variables are provided by PTXdist to simplify creating rule files. Every developer should use these variables in every single line in the rule file to avoid any further adaption when external paths are changed.

To get their content related to the current project, we can simply run a:

```
$ ptxdist print PTXDIST_TOPDIR
/usr/local/lib/ptxdist-2014.07.0
```

Replace the PTXDIST_TOPDIR with one of the other generic variables PTXdist provides.

5.1.1 PTXDIST_TOPDIR

Points always to the installation directory of PTXdist.

5.1.2 PTXDIST_WORKSPACE

Everything that references PTXDIST_WORKSPACE will use the active projects's folder.

5.1.3 PTXDIST_SYSROOT_CROSS

PTXDIST_SYSROOT_CROSS points to a directory tree all cross relevant executables, libraries and header files are installed to in the current project. All of the project's packages built for the host to create data for the target are searching in this directory tree for their dependencies (executables, header and library files). Use `$(PTXDIST_SYSROOT_CROSS)/bin` to install executables, `$(PTXDIST_SYSROOT_CROSS)/include` for header files and `$(PTXDIST_SYSROOT_CROSS)/lib` for libraries.

5.1.4 PTXDIST_SYSROOT_HOST

PTXDIST_SYSROOT_HOST points to a directory tree all host relevant executables, libraries and header files are installed to. All project's packages built for the host are searching in this directory tree for their dependencies (executables, header and library files). Use `$(PTXDIST_SYSROOT_HOST)/bin` to install executables, `$(PTXDIST_SYSROOT_HOST)/include` for header files and `$(PTXDIST_SYSROOT_HOST)/lib` for libraries.

5.1.5 PTXDIST_SYSROOT_TARGET

PTXDIST_SYSROOT_TARGET points to a directory tree all target relevant libraries and header files are installed to. All project's packages built for the target are searching in this directory tree for their dependencies (header and library files). These files are for compile time only (for example to link a target executable against a target library), not for runtime! Use `$(PTXDIST_SYSROOT_TARGET)/include` for header files and `$(PTXDIST_SYSROOT_TARGET)/lib` for libraries.

Other useful variables:

5.1.6 CROSS_PATH

Use to find cross tools. This path must be used to create anything that depends on the target's architecture, but needs something running on the host to do the job. Examples:

Creating a jffs2 image from the target's root filesystem This will need a tool running on the host, but it will create data or code that runs on or is used on the target

Building a library for the target If this library needs other resources to be built (other libraries) its configure finds the right information in this path.

5.1.7 HOST_PATH

Used to find host tools. This path must be used to create anything that not depends on the architecture.

5.1.8 ROOTDIR

ROOTDIR points to the root of the target's root filesystem in the current project. Used in very rare cases (to create strange packages based on data in target's root filesystem for example).

5.1.9 PTXCONF_PLATFORM

PTXCONF_PLATFORM expands to the name of the currently selected platform. This name is used in various file names and paths.

5.1.10 PTXDIST_PLATFORMSUFFIX

PTXDIST_PLATFORMSUFFIX expands to the name of the currently selected platform, but with a leading dot. This is used in various files PTXdist should search for.

5.1.11 PTXDIST_PLATFORMCONFIGDIR

PTXDIST_PLATFORMCONFIGDIR points to the directory tree of the currently selected platform. This path is used in various search functions.

5.1.12 PTXDIST_PLATFORMDIR

PTXDIST_PLATFORMDIR points to the directory build tree of the currently selected platform.

5.2 Rule File Macro Reference

Rules files in PTXdist are using macros to get things work. Its highly recommended to use these macros instead to do something by ourself. Using the macros is portable and such easier to maintain in the case a project should be upgraded to a more recent PTXdist version.

This chapter describes the predefined macros in PTXdist and their usage.

Whenever one of the macros installs something to the target's root filesystem, it also accepts user and group IDs which are common in all filesystems Linux supports. These IDs can be given as numerical values and as text strings. In the case text strings are given PTXdist converts them into the corresponding numerical value based on the BSP local file `FIXME "projectroot/etc/"`

Note: This list is not complete yet.

5.2.1 targetinfo

Usage:

```
$(call targetinfo)
```

Gives a feedback, what build *stage* is just started. That's why it should always be the first call for each *stage*. For the package *foo* and the *compile stage* it will output:

```
-----  
target: foo.compile  
-----
```

5.2.2 touch

Usage:

```
$(call touch)
```

Gives a feedback, what build *stage* is just finished. That's why it should always be the last call for each *stage*. For the package *foo* and the *compile stage* it will output:

```
finished target foo.compile
```

5.2.3 clean

Usage:

```
$(call clean, <directory path>)
```

Removes the given directory `<directory path>`.

5.2.4 install_copy

Usage:

```
$(call install_copy, <package>, <UID>, <GID>, <permission>, <source> [, <dest> [, <strip> ]])
```

Installs given file or directory into:

- the project's `platform-i586/root/`
- the project's `platform-i586/root-debug/`

- an ipkg/opkg packet in the project's platform-i586/packages/

Some of the parameters have fixed meanings:

<package> Name of the IPKG/OPKG the macro should work on

<UID> User ID the file should use in the target's root filesystem

<GID> Group ID the file should use in the target's root filesystem

<permission> Permission (in an octal value) the file should use in the target's root filesystem

The remaining parameters vary with the use case:

The **<source>** parameter can be:

- a directory path that should be created in the target's root filesystem. In this case the **<destination>** must be omitted. The given path must always start with a / and means the root of the target's filesystem.
- an absolute path to a file that should be copied to the target's root filesystem. To avoid fixed paths, all packages are providing the **<package>_DIR** variable. So, this parameter in our *foo* example package can be a `$(FOO_DIR)/foo`.
- a minus sign (-). PTXdist uses the **<destination>** parameter in this case to locate the file to copy from. This only works if the package uses the default *install* stage. Only in this case an additional folder in platform-i586/packages will be created for the package and its files. For our *foo* example package this directory is platform-i586/packages/foo-1.1.0.

The **<dest>** parameter can be:

- omitted if a directory in target's root filesystem should be created. For this case the directory to be created is in the **<source>** parameter.
- an absolute path and filename with its root in target's root filesystem. It must start with a slash (/). If also the **<source>** parameter was given, the file can be renamed while copying. If the **<source>** parameter was given as a minus sign (-) the **<destination>** is also used to locate the source. For our *foo* example package if we give **<destination>** as `/usr/bin/foo`, PTXdist copies the file `platform-i586/packages/foo-1.1.0/usr/bin/foo`

The **<strip>** is a complete optional parameter to prevent this macro from the regular stripping process it does on files. Most of the cases stripping debug information from files is intended. But some kind of files getting destroyed when this stripping happens to them. One example is a Linux kernel module. If it gets stripped, it can't be loaded into the kernel anymore.

full strip fully strip the file while installing when this parameter is **y** or not given at all (default case).

partially strip only strips real debug information from the file when this parameter is **k**. Useful to keep Linux kernel module loadable at run-time

no strip preserve the file from being stripped when this parameter is one of the following: **o**, **n**, **no**, **N** or **NO**.

Due to the complexity of this macro, here are some usage examples:

Create a directory in the root filesystem:

```
$(call install_copy, foo, 0, 0, 0755, /home/user-foo)
```

Copy a file from the package build directory to the root filesystem:

```
$(call install_copy, foo, 0, 0, 0755, $(FOO_DIR)/foo, /usr/bin/foo)
```

Copy a file from the package build directory to the root filesystem and rename it:

```
$(call install_copy, foo, 0, 0, 0755, $(FOO_DIR)/foo, /usr/bin/bar)
```

Copy a file from the package install directory to the root filesystem:

```
$(call install_copy, foo, 0, 0, 0755, -, /usr/bin/foo)
```

5.2.5 install_tree

Usage:

```
$(call install_tree, <package>, <UID>, <GID>, <source dir>, <destination dir>)
```

Installs the whole directory tree with all files from the given directory into:

- the project's platform-i586/root/
- the project's platform-i586/root-debug/
- an ipkg packet in the project's platform-i586/packages/

Some of the parameters have fixed meanings:

<package> Name of the IPKG/OPKG the macro should work on

<UID> User ID the directories and files should use in the target's root filesystem or - to keep the UID from the source tree

<GID> Group ID the directories and files should use in the target's root filesystem or - to keep the GID from the source tree

<source dir> This is the path to the tree of directories and files to be installed. It can be - to use the package directory of the current package instead

<destination dir> The basename of the to-be-installed tree in the root filesystem

Note: This installation macro

- uses the same permission flags in the destination dir as found in the source dir. This is valid for directories and regular files
- skips all directories with names like .svn, .git, .pc and CVS in the source directory

Examples:

Install the whole tree found in /home/jbe/foo to the root filesystem at location /usr/share/bar.

```
$(call install_tree, foo, 0, 0, /home/jbe/foo, /usr/share/bar)
```

Install all files from the tree found in the current package FOO to the root filesystem at location /usr/share/bar.

```
$(call install_tree, foo, 0, 0, -, /usr/share/bar)
```

If the current package is foo-1.0 the base path for the directory tree will be \$(PKGDIR)/foo-1.0/usr/share/bar.

5.2.6 install_alternative_tree

Usage:

```
$(call install_alternative_tree, <package>, <UID>, <GID>, <destination dir>)
```

Installs the whole source directory tree with all files from the given directory into:

- the project's platform-i586/root/
- the project's platform-i586/root-debug/
- an ipkg packet in the project's platform-i586/packages/

The <destination dir >is used like in the install_alternative to let PTXdist search in the same directories and order for the given directory.

Some of the parameters have fixed meanings:

<package> Name of the IPKG/OPKG the macro should work on

<UID> User ID the directories and files should use in the target's root filesystem or - to keep the UID from the source

<GID> Group ID the directories and files should use in the target's root filesystem or - to keep the GID from the source

<destination dir> The basename of the to-be-installed tree in the root filesystem

Note: This installation macro

- uses the same permission flags in the destination dir as found in the source dir. This is valid for directories and regular files
- skips all directories with names like .svn, .git, .pc and CVS in the source directory

Examples:

Install the whole tree found in project's projectroot/usr/share/bar to the root filesystem at location /usr/share/bar.

```
$(call install_alternative_tree, foo, 0, 0, /usr/share/bar)
```

5.2.7 install_alternative

Usage:

```
$(call install_alternative, <package>, <UID>, <GID>, <permission>, <destination>)
```

Installs given files or directories into:

- the project's platform-i586/root/
- the project's platform-i586/root-debug/
- an ipkg/opkg packet in the project's platform-i586/packages/

The base parameters and their meanings:

<package> Name of the IPKG/OPKG the macro should work on

<UID> User ID the file should use in the target's root filesystem

<GID> Group ID the file should use in the target's root filesystem

<permission> Permission (in an octal value) the file should use in the target's root filesystem

The parameter **<destination>** is meant as an absolute path and filename in target's root filesystem. PTXdist searches for the source of this file in:

- the local project
- in the used platform
- PTXdist's install path
- in the current package

As this search algorithm is complex, here an example for the file `/etc/foo` in package `F00`. PTXdist will search for this file in the following order:

- project's directory `projectroot.i586/etc/foo`
- project's directory `projectroot/etc/foo.i586`
- platform's directory `configs/i586-qemu/projectroot/etc/foo`
- project's directory `projectroot/etc/foo`
- ptxdist's directory `generic/etc/foo`
- project's directory `$(F00_DIR)/etc/foo`

The generic rules are looking like the following:

- `$(PTXDIST_WORKSPACE)/projectroot$(PTXDIST_PLATFORMSUFFIX)/etc/foo`
- `$(PTXDIST_WORKSPACE)/projectroot/etc/foo$(PTXDIST_PLATFORMSUFFIX)`
- `$(PTXDIST_PLATFORMCONFIGDIR)/projectroot/etc/foo`
- `$(PTXDIST_WORKSPACE)/projectroot/etc/foo`
- `$(PTXDIST_TOPDIR)/generic/etc/foo`
- `$(F00_DIR)/etc/foo`

Note: You can get the current values for the listed variables above via running PTXdist with the print parameter:

```
ptxdist print PTXDIST_PLATFORMSUFFIX
```

5.2.8 install_link

Usage:

```
$(call install_link, <package>, <point to>, <where>)
```

Installs a symbolic link into:

- the project's platform-i586/root/
- the project's platform-i586/root-debug/
- an ipkg/opkg packet in the project's platform-i586/packages/

The parameters and their meanings:

<package> Name of the IPKG/OPKG the macro should work on

<point to> Path and name the link should point to. Note: This macro rejects absolute paths. If needed use relative paths instead.

<where> Path and name of the symbolic link.

A few usage examples.

Create a symbolic link as /usr/lib/libfoo.so pointing to libfoo.so.1.1.0 in the same directory:

```
$(call install_link, foo, libfoo.so.1.1.0, /usr/lib/libfoo.so)
```

Create a symbolic link as /usr/bin/foo pointing to /bin/bar:

```
$(call install_link, foo, ../../bin/bar, /usr/bin/foo)
```

5.2.9 install_archive

Usage:

```
$(call install_archive, <package>, <UID>, <GID>, <archive> , <base path>)
```

Installs archives content into:

- the project's platform-i586/root/
- the project's platform-i586/root-debug/
- an ipkg/opkg packet in the project's platform-i586/packages/

All parameters have fixed meanings:

<package> Name of the IPKG/OPKG the macro should work on

<UID> User ID all files and directory of the archive should use in the target's root filesystem. A - uses the file's/directory's UID in the archive

<GID> Group ID the files and directories should use in the target's root filesystem. A - uses the file's/directory's GID in the archive

<archive> Name of the archive to be used in this call. The given path and filename is used as is

<base path> Base path component in the root filesystem the archive should be extracted to. Can be just / for root.

5.2.10 install_lib

Usage:

```
$(call install_lib, <package>, <UID>, <GID>, <permission>, <libname>)
```

Installs the shared library <libname> into the root filesystem.

- the project's platform-i586/root/
- the project's platform-i586/root-debug/
- an ipkg/opkg packet in the project's platform-i586/packages/

The parameters and their meanings:

<package> Name of the IPKG/OPKG the macro should work on

<UID> User ID the file should use in the target's root filesystem

<GID> Group ID the directories and files should use in the target's root filesystem

<permission> Permission (as an octal value) the library should use in the target's root filesystem (mostly 0644)

<libname> Basename of the library without any extension and path

The install_lib macro searches for the library at the most common directories /lib and /usr/lib. And it searches always in the package's corresponding directory in platform-i586/packages/. It also handles all required links to make the library work at runtime.

An example.

Lets assume the package 'foo-1.0.0' has installed the library libfoo into its platform-i586/packages/foo-1.0.0 at:

- the lib: platform-i586/packages/foo-1.0.0/usr/lib/libfoo1.so.0.0.0
- first link: platform-i586/packages/foo-1.0.0/usr/lib/libfoo1.so.0
- second link: platform-i586/packages/foo-1.0.0/usr/lib/libfoo1.so

To install this library and its corresponding links, the following line does the job:

```
$(call install_lib, foo, 0, 0, 0644, libfoo1)
```

Note: The package's install stage must be 'DESTDIR' aware to be able to make it install its content into the corresponding packages directory (in our example platform-i586/packages/foo-1.0.0/ here).

5.2.11 ptx/endis

To convert the state (set/unset) of a variable into an enable/disable string use the ptx/endis macro. If the given <variable> is set this macro expands to the string enable, if unset to disable instead.

Usage:

```
--$(call ptx/endis, <variable>)-<parameter>
```

An example:

```
FOO_CONF_OPT += --$(call ptx/endis,FOO_VARIABLE)-something
```

Depending on the state of FOO_VARIABLE this line results into

```
FOO_CONF_OPT += --enable-something (if FOO_VARIABLE is set)
FOO_CONF_OPT += --disable-something (if FOO_VARIABLE is unset)
```

Refer ptx/disen for the opposite string expansion.

5.2.12 ptx/disen

To convert the state (set/unset) of a variable into a disable/enable string use the ptx/disen macro. If the given <variable> is set this macro expands to the string disable, if unset to enable instead.

Usage:

```
--$(call ptx/disen, <variable>)-<parameter>
```

An example:

```
FOO_CONF_OPT += --$(call ptx/disen,FOO_VARIABLE)-something
```

Depending on the state of FOO_VARIABLE this line results into

```
FOO_CONF_OPT += --disable-something (if FOO_VARIABLE is set)
FOO_CONF_OPT += --enable-something (if FOO_VARIABLE is unset)
```

Refer ptx/endis for the opposite string expansion.

5.2.13 ptx/wwo

To convert the state (set/unset) of a variable into a with/without string use the ptx/wwo macro. If the given <variable> is set this macro expands to the string with, if unset to without instead.

Usage:

```
--$(call ptx/wwo, <variable>)-<parameter>
```

An example:

```
FOO_CONF_OPT += --$(call ptx/wwo,FOO_VARIABLE)-something
```

Depending on the state of FOO_VARIABLE this line results into

```
FOO_CONF_OPT += --with-something (if FOO_VARIABLE is set)
FOO_CONF_OPT += --without-something (if FOO_VARIABLE is unset)
```

5.2.14 ptx/ifdef

To convert the state (set/unset) of a variable into one of two strings use the ptx/ifdef macro. If the given <variable> is set this macro expands to the first given string, if unset to the second given string.

Usage:

```
--with-something=$(call ptx/ifdef, <variable>, <first-string>, <second-string>)
```

An example:

```
FOO_CONF_OPT += --with-something=$(call ptx/ifdef,FOO_VARIABLE,/usr,none)
```

Depending on the state of FOO_VARIABLE this line results into

```
FOO_CONF_OPT += --with-something=/usr (if FOO_VARIABLE is set)
FOO_CONF_OPT += --with-something=none (if FOO_VARIABLE is unset)
```

5.3 Rule file layout

Each rule file provides PTXdist with the required steps to be done on a per package base:

- get
- extract
- prepare
- compile
- install
- targetinstall

5.3.1 Default stage rules

As for most packages these steps can be done in a default way, PTXdist provides generic rules for each package. If a package's rule file does not provide a specific stage rule, the default stage rule will be used instead.



Omitting one of the stage rules **does not mean** that PTXdist skips this stage!
In this case the default stage rule is used instead.

get Stage Default Rule

If the *get* stage is omitted, PTXdist runs instead:

```
$(STATEDIR)/@package@.get:
    @$(call targetinfo)
    @$(call touch)
```

Which means this step is skipped.

If the package is an archive that must be downloaded from the web, the following rule must exist in this case:

```
$(@package@_SOURCE):
    @$(call targetinfo)
    @$(call get, @package@)
```

extract Stage Default Rule

If the *extract* stage is omitted, PTXdist runs instead:

```
$(STATEDIR)/@package@.extract:
    @$(call targetinfo)
    @$(call clean, $(@package@_DIR))
    @$(call extract, @package@)
    @$(call patchin, @package@)
    @$(call touch)
```

Which means a current existing directory of this package will be removed, the archive gets freshly extracted again and (if corresponding patches are found) patched.

prepare Stage Default Rule

If the *prepare* stage is omitted, PTXdist runs a default stage rule depending on some variable settings.

If the package's rule file defines `@package@_CONF_TOOL` to NO, this stage is simply skipped.

All rules files shall create the `@package@_CONF_ENV` variable and define it at least to `$(CROSS_ENV)` if the prepare stage is used.

If the package's rule file defines `@package@_CONF_TOOL` to `autoconf` (`FOO_CONF_TOOL = autoconf` for our *foo* example), PTXdist treats this package as an autotoolized package and runs:

```
$(STATEDIR)/@package@.prepare:
    @$(call targetinfo)
    @$(call clean, $(@package@_DIR)/config.cache)
    @cd $(@package@_DIR)/$(@package@_SUBDIR) && \
        $(@package@_PATH) $(@package@_CONF_ENV) \
        ./configure $(@package@_CONF_OPT)
    @$(call touch)
```

The `@package@_CONF_OPT` should at least be defined to `$(CROSS_AUTOCONF_USR)` or `$(CROSS_AUTOCONF_ROOT)`.

If the package's rule file defines `@package@_CONF_TOOL` to `cmake` (`FOO_CONF_TOOL = cmake` for our *foo* example), PTXdist treats this package as a *cmake* based package and runs:

```
$(STATEDIR)/@package@.prepare:
    @$(call targetinfo)
    @cd $(@package@_DIR) && \
        $(@package@_PATH) $(@package@_CONF_ENV) \
        cmake $(@package@_CONF_OPT)
    @$(call touch)
```

The `@package@_CONF_OPT` should at least be defined to `$(CROSS_CMAKE_USR)` or `$(CROSS_CMAKE_ROOT)`.

If the package's rule file defines `@package@_CONF_TOOL` to `qmake` (`FOO_CONF_TOOL = qmake` for our *foo* example), PTXdist treats this package as a *qmake* based package and runs:

```
$(STATEDIR)/@package@.prepare:
    @$(call targetinfo)
    @cd $(@package@_DIR) && \
        $(@package@_PATH) $(@package@_CONF_ENV) \
        qmake $(@package@_CONF_OPT)
    @$(call touch)
```

The `@package@_CONF_OPT` should at least be defined to `$(CROSS_QMAKE_OPT)`.

compile Stage Default Rule

If the *compile* stage is omitted, PTXdist runs instead:

```
$(STATEDIR)/@package@.compile:
    @$(call targetinfo)
    @cd $(@package@_DIR) && \
        $(@package@_PATH) $(@package@_MAKE_ENV) \
        $(MAKE) $(@package@_MAKE_OPT) $(@package@_MAKE_PAR)
    @$(call touch)
```

If the `@package@_MAKE_ENV` is not defined, it defaults to `$(CROSS_ENV)`. If some additional variables should be added to the `@package@_MAKE_ENV`, always begin with the `$(CROSS_ENV)` and then add the additional variables.

If the `@package@_MAKE_OPT` is intended for additional parameters to be forwarded to `make` or to overwrite some settings from the `@package@_MAKE_ENV`. If not defined in the rule file it defaults to an empty string.

Note: `@package@_MAKE_PAR` can be defined to YES or NO to control if the package can be built in parallel.

install Stage Default Rule

If the *install* stage is omitted, PTXdist runs instead:

```
$(STATEDIR)/@package@.install:
    @$(call targetinfo)
    @cd $(@package@_DIR) && \
        $(@package@_PATH) $(@package@_MAKE_ENV) \
        $(MAKE) $(@package@_INSTALL_OPT)
    @$(call touch)
```

Note: `@package@_INSTALL_OPT` is always defined to `install` if not otherwise specified. This value can be replaced by a package's rule file definition.

targetinstall Stage Default Rule

There is no default rule for a package's *targetinstall* state. PTXdist has no idea what is required on the target at run-time. This stage is up to the developer only. Refer to section 5.2 for further info on how to select files to be included in the target's root filesystem.

5.3.2 Skipping a Stage

For the case that a specific stage should be skipped, an empty rule must be provided:

```
$(STATEDIR)/@package@.<stage_to_skip>:
    @$(call targetinfo)
    @$(call touch)
```

Replace the <stage_to_skip> by get, extract, prepare, compile, install or targetinstall.

5.4 PTXdist parameter reference

PTXdist is a command line tool, which is basically called as:

```
$ ptxdist <action [args]> [options]
```

5.4.1 Setup and Project Actions

menu: this will start a menu front-end to control some of PTXdist's features in a menu based convenient way. This menu handles the actions *menuconfig*, *platformconfig*, *kernel config*, *select*, *platform*, *boardsetup*, *setup*, *go* and *images*.

select <config>: this action will select a user land configuration. This step is only required in projects, where no *selected_ptxconfig* file is present. The <config> argument must point to a valid user land configuration file. PTXdist provides this feature to enable the user to maintain more than one user land configuration in the same project.

platform <config>: this action will select a platform configuration. This step is only required in projects, where no *selected_platform* file is present. The <config> argument must point to a valid platform configuration file. PTXdist provides this feature to enable the user to maintain more than one platform in one project.

setup: PTXdist uses some global settings, independent from the project it is working on. These settings belong to users preferences or simply some network settings to permit PTXdist to download required packages.

boardsetup: PTXdist based projects can provide information to setup and configure the target automatically. This action let the user setup the environment specific settings like the network IP address and so on.

projects: if the generic projects coming in a separate archive are installed, this actions lists the projects a user can clone for its own work.

clone <from> <to>: this action clones an existing project from the projects list into a new directory. The <from> argument must be a name gotten from `ptxdist projects` command, the <to> argument is the new project (and directory) name, created in the current directory.

menuconfig: start the menu to configure the project's root filesystem. This is in respect to user land only. Its the main menu to select applications and libraries, the root filesystem of the target should consist of.

menuconfig platform: this action starts the menu to configure platform's settings. As these are architecture and target specific settings it configures the toolchain, the kernel and a bootloader (but no user land components). Due to a project can support more than one platform, this will configure the currently selected platform. The short form for this action is `platformconfig`.

menuconfig kernel: start the menu to configure the platform's kernel. As a project can support more than one platform, this will configure the currently selected platform. The short form for this action is `kernelconfig`.

`menuconfig barebox`: this action starts the configure menu for the selected bootloader. It depends on the platform settings which bootloader is enabled and to be used as an argument to the `menuconfig` action parameter. Due to a project can support more than one platform, this will configure the bootloader of the currently selected platform.

5.4.2 Build Actions

`go`: this action will build all enabled packages in the current project configurations (platform and user land). It will also rebuild reconfigured packages if any or build additional packages if they were enabled meanwhile. If enables this step also builds the kernel and bootloader image.

`images`: most of the time this is the last step to get the required files and/or images for the target. It creates filesystems or device images to be used in conjunction with the target's filesystem media. The result can be found in the `images/` directory of the project or the platform directory.

5.4.3 Clean Actions

`clean`: the `clean` action will remove all generated files while the last `go` run: all build, packages and root filesystem directories. Only the selected configuration files are left untouched. This is a way to start a fresh build cycle.

`clean root`: this action will only clean the root filesystem directories. All the build directories are left untouched. Using this action will re-generate all `ipkg/opkg` archives from the already built packages and also the root filesystem directories in the next `go` action. The `clean root` and `go` action is useful, if the `targetinstall` stage for all packages should run again.

`clean <package>`: this action will only clean the dedicated `<package>`. It will remove its build directory and all installed files from the corresponding `sysroot` directory.

`distclean`: the `distclean` action will remove all files that are not part of the main project. It removes all generated files and directories like the `clean` action and also the created links in any `platform` and/or `select` action.

6 Various Aspects of Daily Work

6.1 Using an External Kernel Source Tree

This application note describes how to use an external kernel source tree within a PTXdist project. In this case the external kernel source tree is managed by GIT.

6.1.1 Cloning the Linux Kernel Source Tree

In this example we are using the officially Linux kernel development tree.

```
jbe@octopus:~$ git clone git://git.kernel.org/pub/scm/linux/kernel/git/torvalds/linux.git
[...]
jbe@octopus:~$ ls -l
[...]
drwxr-xr-x 38 jbe  ptx 4096 2011-11-16 10:21 myprj
drwxr-xr-x 25 jbe  ptx 4096 2011-11-16 10:42 linux
[...]
```

6.1.2 Configuring the PTXdist Project

Note: assumption is here, the directory `/myprj` contains a valid PTXdist project.

To make PTXdist use of this kernel source tree, instead of an archive we can simply create a link now:

```
jbe@octopus:~$ cd myprj
jbe@octopus:~/myprj$ mkdir local_src
jbe@octopus:~/myprj$ ln -s ~/linux local_src/kernel.i586
```

PTXdist will handle it in the same way as a kernel part of the project. Due to this, we must setup:

- Some kind of kernel version
- Kernel configuration
- Image type used on our target architecture
- If we want to build modules
- Patches to be used (or not)

Lets setup these topics. We just add the kernel component to it.

```
jbe@octopus:~/myprj$ ptxdist platformconfig
```

We must enable the **Linux kernel** entry first, to enable kernel building as part of the project. After enabling this entry, we must enter it, and:

- Setting up the **kernel version**
- Setting up the **MD5 sum** of the corresponding archive
- Selecting the correct image type in the entry **Image Type**.
- Configuring the kernel within the menu entry **patching & configuration**.
 - If no patches should be used on top of the selected kernel source tree, we keep the **patch series file** entry empty. As GIT should help us to create these patches for deployment, it should be kept empty on default in this first step.
 - Select a name for the kernel configuration file and enter it into the **kernel config file** entry.



Even if we do not intend to use a kernel archive, we must setup these entries with valid content, else PTXdist will fail. Also the archive must be present on the host, else PTXdist will start a download.

Now we can leave the menu and store the new setup. The only still missing component is a valid kernel config file now. We can use one of the default config files the Linux kernel supports as a starting point. To do so, we copy one to the location, where PTXdist expects it in the current project. In a multi platform project this location is the platform directory usually in `configs/<platform-directory>`. We must store the file with a name selected in the platform setup menu (**kernel config file**).

6.1.3 Work Flow

Now its up to ourself working on the GIT based kernel source tree and using PTXdist to include the kernel into the root filesystem.

To configure the kernel source tree, we simply run:

```
jbe@octopus:~/myprj$ ptxdist kernelconfig
```

To build the kernel:

```
jbe@octopus:~/myprj$ ptxdist targetinstall kernel
```

To rebuild the kernel:

```
jbe@octopus:~/myprj$ ptxdist drop kernel compile  
jbe@octopus:~/myprj$ ptxdist targetinstall kernel
```

6.2 Discovering Runtime Dependencies

Often it happens that an application on the target fails to run, because one of its dependencies is not fulfilled. This section should give some hints on how to discover these dependencies.

6.2.1 Dependencies on Shared Libraries

Getting the missed shared library for example at runtime is something easily done: The dynamic linker prints the missing library to the console.

To check at build time if all other dependencies are present is easy, too. The architecture specific `readelf` tool can help us here. It comes with the `OSELAS.Toolchain` and is called via `i586-unknown-linux-gnu-readelf` (this example uses the one coming with the `i586-unknown-linux-gnu` toolchain).

To test the `foo` binary from our new package `F00`, we simply run:

```
$ i586-unknown-linux-gnu-readelf -d platform-i586/root/usr/bin/foo | grep NEEDED
0x00000001 (NEEDED)      Shared library: [libm.so.6]
0x00000001 (NEEDED)      Shared library: [libz.so.1]
0x00000001 (NEEDED)      Shared library: [libc.so.6]
```

We now can check if all of the listed libraries are present in the root filesystem. This works for shared libraries, too. It is also a way to check if various configurations of our package are working as expected (e.g. disabling a feature should also remove the required dependency of this feature).

6.2.2 Dependencies on other Resources

Sometimes a binary fails to run due to missing files, directories or device nodes. Often the error message (if any) that the binary creates in this case is ambiguous. Here the `strace` tool can help us, namely to observe the binary at runtime. `strace` shows all the system calls that the binary or its shared libraries are performing.

`strace` is one of the target debugging tools which `PTXdist` provides in its `Debug Tools` menu.

After adding `strace` to the root filesystem, we can use it and observe our `foo` binary:

```
$ strace usr/bin/foo
execve("/usr/bin/foo", ["/usr/bin/foo"], [/* 41 vars */]) = 0
brk(0) = 0x8e4b000
access("/etc/ld.so.preload", R_OK) = -1 ENOENT (No such file or directory)
open("/etc/ld.so.cache", O_RDONLY) = 3
fstat64(3, {st_mode=S_IFREG|0644, st_size=77488, ...}) = 0
mmap2(NULL, 77488, PROT_READ, MAP_PRIVATE, 3, 0) = 0xb7f87000
close(3) = 0
open("/lib//lib/libm-2.5.1.so", O_RDONLY) = 3
read(3, "\177ELF\1\1\1\0\0\0\0\0\0\0\0\3\0\3\0\1\0\0\0p%\0\000"... , 512) = 512
mmap2(NULL, 4096, PROT_READ|PROT_WRITE, MAP_PRIVATE|MAP_ANONYMOUS, -1, 0) = 0xb7f86000
fstat64(3, {st_mode=S_IFREG|0555, st_size=48272, ...}) = 0
mmap2(NULL, 124824, PROT_READ|PROT_EXEC, MAP_PRIVATE|MAP_DENYWRITE, 3, 0) = 0xb7f67000
mmap2(0xb7f72000, 4096, PROT_READ|PROT_WRITE, MAP_PRIVATE|MAP_FIXED|MAP_DENYWRITE, 3, 0xb) = 0xb7f72000
mmap2(0xb7f73000, 75672, PROT_READ|PROT_WRITE, MAP_PRIVATE|MAP_FIXED|MAP_ANONYMOUS, -1, 0) = 0xb7f73000
close(3) = 0
open("/lib/libc.so.6", O_RDONLY) = 3
read(3, "\177ELF\1\1\1\0\0\0\0\0\0\0\0\3\0\3\0\1\0\0\0332X\1"... , 512) = 512
fstat64(3, {st_mode=S_IFREG|0755, st_size=1405859, ...}) = 0
[...]
```


Occasionally the output of `strace` can be very long and the interesting parts are lost. So, if we assume the binary tries to open a nonexistent file, we can limit the output to all open system calls:

```
$ strace -e open usr/bin/foo
open("/etc/ld.so.cache", O_RDONLY)      = 3
open("/lib/libm-2.5.1.so", O_RDONLY)   = 3
open("/lib/libz.so.1.2.3", O_RDONLY)   = 3
open("/lib/libc.so.6", O_RDONLY)       = 3
[...]
open("/etc/foo.conf", O_RDONLY) = -1 ENOENT (No such file or directory)
```


The binary may fail due to a missing `/etc/foo.conf`. This could be a hint on what is going wrong (it might not be the final solution).

6.3 Debugging with CPU emulation


LIKELIHOOD

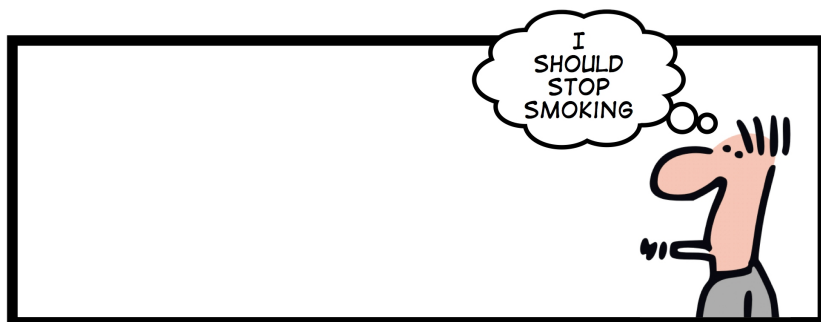

MAYBE

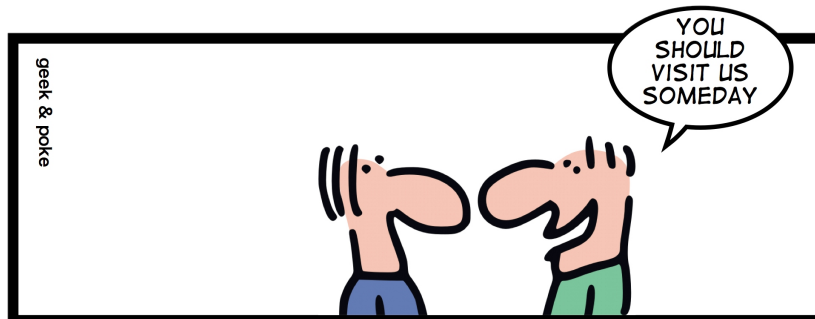

PRETTY UNLIKELY

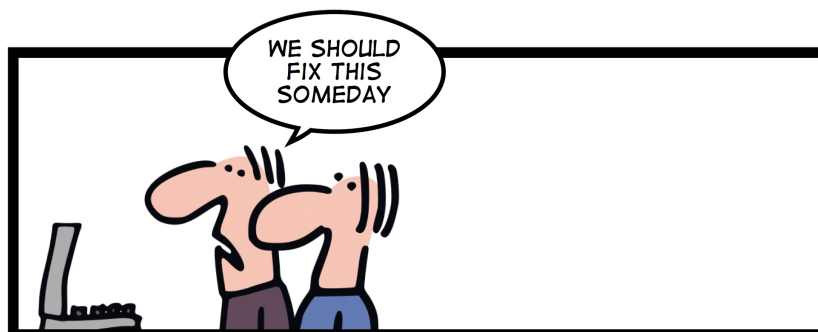

NEVER EVER

If we do not need some target related feature to run our application, we can also debug it through a simple CPU emulation. Thanks to QEMU we can run ELF binaries for other architectures than our build host is.

6.3.1 Running an Application made for a different Architecture

PTXdist creates a fully working root filesystem with all runtime components in `platform-i586/root/`. Lets assume we made a PTXdist based project for a i586 CPU. Part of this project is our application `myapp` we are currently working on. PTXdist builds the root filesystem and also compiles our application. It also installs it to `usr/bin/myapp` in the root filesystem.

With this preparation we can run it on our build host:

```
$ cd platform-i586/root
platform-i586/root $ qemu-i386 -cpu i586 -L . usr/bin/myapp
```

This command will run the application `usr/bin/myapp` built for an i586 CPU on the build host and is using all library components from the current directory.

For the stdin and -out QEMU uses the regular mechanism of the build host's operating system. Using QEMU in this way let us simply check our programs. There are also QEMU environments for other architectures available.

6.3.2 Debugging an Application made for a different Architecture

Debugging our application is also possible with QEMU. All we need are a root filesystem with debug symbols available, QEMU and an architecture aware debugger.

The root filesystem with debug symbols will be provided by PTXdist, the architecture aware debugger comes with the OSELAS.Toolchain. Two consoles are required for this debug session in this example. We start the QEMU in the first console as:

```
$ cd platform-i586/root-debug
platform-i586/root-debug $ qemu-i386 -g 1234 -cpu i586 -L . usr/bin/myapp
```

Note: PTXdist always builds two root filesystems. `platform-i586/root/` and `platform-i586/root-debug/`. `platform-i586/root/` contains all components without debug information (all binaries are in the same size as used later on on the real target), while all components in `platform-i586/root-debug/` still containing the debug symbols and are much bigger in size.

The added `-g 1234` parameter lets QEMU wait for a GDB connection to run the application.

In the second console we start GDB with the correct architecture support. This GDB comes with the same OSELAS.Toolchain that was also used to build the project. In our example we are using the `i586-unknown-linux-gnu` toolchain for our `qemu-i386` CPU:

```
$ i586-unknown-linux-gnu-gdbtui root-debug/usr/bin/myapp
```

This will run a *curses* based GDB. Not so easy to handle (we must enter all the commands and cannot click with a mouse!), but very fast to take a quick look at our application.

At first we tell GDB where to look for debug symbols. The correct directory here is `platform-i586/root-debug/`.

```
(gdb) set solib-absolute-prefix platform-i586/root-debug
```

Next we connect this GDB to the waiting QEMU:

```
(gdb) target remote localhost:1234
Remote debugging using localhost:1234
[New Thread 1]
0x40096a7c in _start () from root-debug/lib/ld.so.1
```

As our application is already started, we can't use the GDB command `start` to run it until it reaches `main()`. We set a breakpoint instead at `main()` and *continue* the application:

```
(gdb) break main
Breakpoint 1 at 0x100024e8: file myapp.c, line 644.
(gdb) continue
Continuing.
Breakpoint 1, main (argc=1, argv=0x4007f03c) at myapp.c:644
```

The top part of the running `gdbtui` console will always show us the current source line. Due to the `root-debug/` directory usage all debug information for GDB is available.

Now we can step through our application by using the commands *step*, *next*, *stepi*, *nexti*, *until* and so on.

Note: It might be impossible for GDB to find debug symbols for components like the main C runtime library. In this case they were stripped while building the toolchain. There is a switch in the `OSELAS.Toolchain` menu to keep the debug symbols also for the C runtime library. But be warned: This will enlarge the `OSELAS.Toolchain` installation on your harddisk! When the toolchain was built with the debug symbols kept, it will be also possible for GDB to debug C library functions our application calls (so it might worth the disk space).

6.4 Migration between Releases

To migrate an existing project from within one minor release to the next one, we do the following step:

```
~/my_bsp# ptxdist migrate
```

PTXdist will ask us for every new configuration entry what to do. We must read and answer these questions carefully. At least we shouldn't answer blindly with 'Y' all the time because this could lead into a broken configuration. On the other hand, using 'N' all to time is more safer. We can still enable interesting new features later on.

6.5 Software Installation and Upgrade

Root filesystems for Linux are usually built as a flash image and pushed into the respective root medium. However, when working with Embedded Linux systems, developers often have the need to

- install new packages
- remove packages
- update packages
- add configuration

Installation of new packages may for example happen if a developer works on a new piece of application code, or if a new library is being written for the embedded system. Package updating may be a requirement even during the system's life cycle, for example for updating a customer application in the field.

Conventional Linux distributions like Debian, SuSE or Fedora use package systems like RPM or DEB to organize their software packages. Unfortunately, these methods require huge packet databases in the root system, which is bad for space constrained embedded systems. So what we need is a packet system that

- offers installation/removement of packages
- has no big database but a very low overhead
- allows packet management features like pre/post scripts (i.e. shutdown a web server, then upgrade it and start it again)

`ipkg` is such a packet system and it is being used in `ptxdist`. Originally developed for the IBM ltsy, `ipkg` is meanwhile being used on all kinds of embedded Linux projects. The concept of `ipkg` archives is based on the well known Debian packet management format: `ipkg` archives are “ar” archives, containing a tarball with the binary files for the target box, plus management scripts which can be run on pre-install, post-install, pre-rm and post-rm. So even if no `ipkg` management utilities are available, developers can modify the archives with standard shell and console tools.

6.5.1 `ipkg` Usage in PTXdist

PTXdist end users and packet developers don't have to care directly about `ipkg`. Packages are being created during the `targetinstall` stage, then put into the `platform-i586/packages/` directory. After the `targetinstall` stage of a packet was done, this directory contains the `ipkg` packet itself plus, for most packages, a directory with the file content.

The `ipkg` packets contain the binaries for the root filesystem as well as start/stop scripts and meta data about the Unix filesystem permissions; when PTXdist creates the root filesystem which is later flashed into the onboard flash of an embedded system, it takes the information from the `ipkg` packets as the source, in order to make sure that the image is consistent to what the packages contain.

Internally, PTXdist always uses `ipkg` packets to store its target data. However, the `ipkg` functionality is not always exposed to the target itself. So in order to use packets, navigate to *Disk and File Utilities* and enable `ipkg`. In the `ipkg` sub menu, make sure that the `install/etc/ipkg.conf` switch is active. This config file is necessary to make `ipkg` work at runtime system.



The `ipkg` tool can only be used in images created by `ptxdist` images. It's not fully working within the `platform-i586/root/` subdirectory used as NFS root filesystem.

6.5.2 Packet Installation

A common use case for `ipkg` packets is to push new software to an already deployed target. There must be a communication channel to transfer the packet itself to the embedded system, i.e. by using FTP or a secure connection via SFTP or SSH, so it has to be made sure that such a service is installed and configured on the target. It is necessary that enough free space is available, in order to store the packet itself. A good rule of thumb is to have twice the size of the installed package: while the packet is being installed, the archive as well as its contents must fit into the system storage. This may be a problem on space constrained systems.

If the packet was transferred, it is necessary to have remote shell access to the box, either via telnet or, if security is an issue, by using SSH. It is also possible to automate this process by using an intelligent update mechanism. The shell is being used to start the necessary commands. If the packet was installed, the `ipkg` archive can be removed again.

6.5.3 Automatic Packet Download

It is also possible to let the embedded system download `ipkg` packets automatically from a network source, without pushing the packets from the outside. In order to do so, a valid URL must be written into the `/etc/ipkg.conf` file. In this case one of the `wget` implementations in PTXdist must be selected, either the one in busybox (**Shell & Console Tools, BusyBox, Networking Utilities**) or the native implementation (**Networking Tools**).

6.5.4 The `ipkg` Command

The following sections describe the `ipkg` features.

What's Installed on the System?

To get a list of installed packages, use `list_installed`:

```
# ipkg list_installed
busybox - 1.1.3 -
figlet - 222 -
gcclibs - 4.1.1 -
gdbserver - 6.4 -
glib - 2.8.6 -
glibc - 2.5 -
ipkg - 0.99.163 -
ixp-firmware - 1 -
kernel-modules - 2.6.18 -
libxml2 - 2.6.27 -
mc - 4.6.1 -
memedit - 0.7 -
ncurses - 5.5 -
pciutils - 2.2.1 -
pureftpd - 1.0.21 -
readline - 5.0 -
rootfs - 1.0.0 -
strace - 4.5.14-20061101 -
udev - 088 -
zlib - 1.2.3 -
Successfully terminated.
```

Content of a Package

To see what files are in an installed package, use `files`:

```
# ipkg files udev
Package udev (106) is installed on root and has the following files:
/etc/init.d/udev
/sbin/udevtrigger
/etc/udev/udev.conf
/etc/rc.d/S00_udev
/sbin/udev
/sbin/udevsettle

Successfully terminated.
```

Adding a Package

Adding a new packet or replacing an already installed one is done by

```
# ipkg install <package-name>.ipk
```

Note the trailing **.ipk**. This extension must be given if the package file is already part of the filesystem. Otherwise `ipkg` tries to download it from the URL configured in `/etc/ipkg.conf`.

Removing a Package

To remove the contents of a package from the running system, ensure that nothing from the package is currently in use. Find out the precise packet name with

```
# ipkg list
```

and remove it's contents from the runtime system with

```
# ipkg remove <package-name>
```


Upgrading a Package

To upgrade a package, first remove it's current contents from the runtime system. In a second step, install the contents of the new `ipkg` package.


```
# ipkg list
# ipkg remove <package-name>
# ipkg install <package-name>[.ipk]
```

6.6 Increasing Build Speed

Modern host systems are providing more than one CPU core. To make use of this additionally computing power recent applications should do their work in parallel.

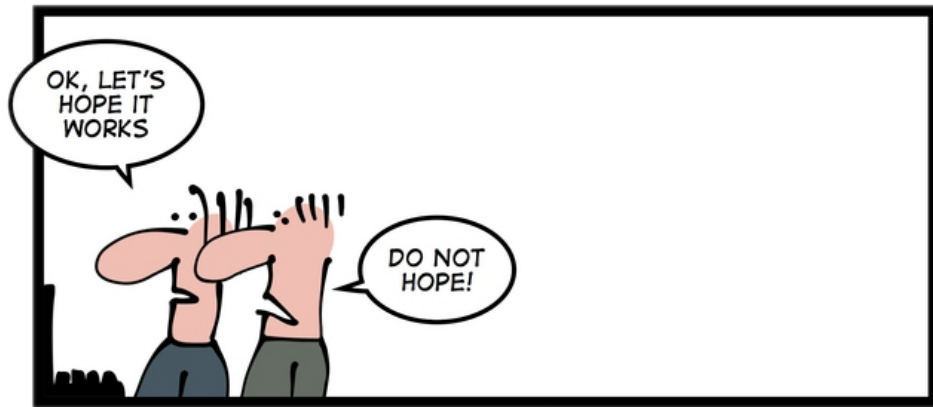

NEVER RELY JUST ON HOPE

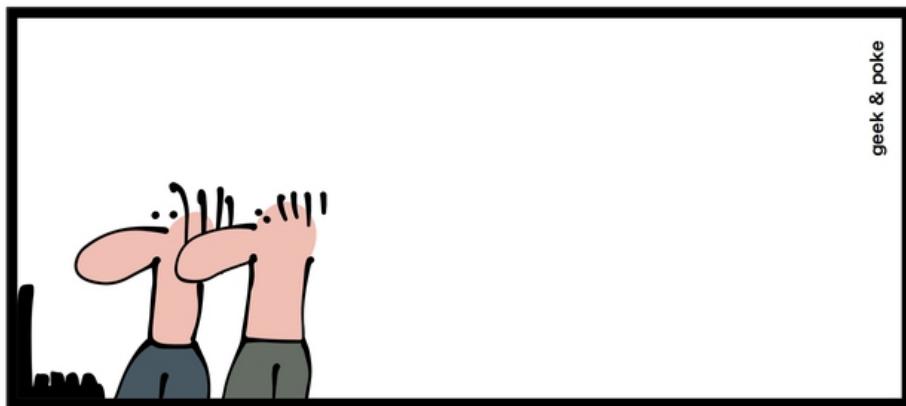

ALWAYS DO MORE!

6.6.1 Using available CPU Cores

PTXdist uses all available CPU cores when building a project by default. But there are some exceptions:

- the prepare stage of all autotools build system based packages can use only one CPU core. This is due to the fact, the running "configure" is a shell script.
- some packages have a broken buildsystem regarding parallel build. These kind of packages build successfully only when building on one single CPU core.
- creating the root filesystem images are also done on a single core only

6.6.2 Manually adjusting CPU Core usage

Manual adjustment of the parallel build behaviour is possible via command line parameters.

- j<number> this defines the number of CPU cores to build a package. The default is two times the available CPU cores.
- je<number> this defines the number of packages to be build in parallel. The default is one package at a time.
- l<number> limit the system load to the given value.



Building packages in parallel is still not tested very well and might fail.

6.6.3 Building in Background

To build a project in background PTXdist can be 'niced'.

- n[<number>] run PTXdist and all of its child processes with the given nicelevel <number>. Without a nicelevel the default is 10.

6.6.4 Building Platforms in Parallel

Due to the fact that more than one platform can exist in a PTXdist project, all these platforms can be built in parallel within the same project directory. As they store their results into different platform subdirectories, they will not conflict. Only PTXdist must be called differently, because each call must be parametrized individually.

The used Platform Configuration

```
$ ptxdist platform <some-platform-config>
```

This call will create the soft link `selected_platformconfig` to the `<some-platform-config>` in the project's directory. After this call, PTXdist uses this soft link as the default platform to build for.

It can be overwritten temporarily by the command line parameter `--platformconfig=<different-platform-config>`.

The used Project Configuration

```
$ ptxdist select <some-project-config>
```

This call will create the soft link `selected_ptxconfig` to the `<some-project-config>` in the project's directory. After this call, PTXdist uses this soft link as the default configuration to build the project.

It can be overwritten temporarily by the command line parameter `--ptxconfig=<different-project-config>`.

The used Toolchain to Build

```
$ ptxdist toolchain <some-toolchain-path>
```

This call will create the soft link `selected_toolchain` to the `<some-toolchain-path>` in the project's directory. After this call, PTXdist uses this soft link as the default toolchain to build the project with.

It can be overwritten temporarily by the command line parameter `--toolchain=<different-toolchain-path>`.

By creating the soft links all further PTXdist commands will use these as the default settings.

By using the three `--platformconfig`, `--ptxconfig` and `--toolchain` parameters, we can switch (temporarily) to a completely different setting. This feature we can use to build everything in one project.

A few Examples

The project contains two individual platforms, sharing the same architecture and same project configuration.

```
$ ptxdist select <project-config>
$ ptxdist toolchain <architecture-toolchain-path>
$ ptxdist --platformconfig=<architecture-A> --quiet go &
$ ptxdist --platformconfig=<architecture-B> go
```

The project contains two individual platforms, sharing the same project configuration.

```
$ ptxdist select <project-config>
$ ptxdist --platformconfig=<architecture-A> --toolchain=<architecture-A-toolchain-path> --quiet go &
$ ptxdist --platformconfig=<architecture-B> --toolchain=<architecture-B-toolchain-path> go
```

The project contains two individual platforms, but they do not share anything else.

```
$ ptxdist --select=<project-A-config> --platformconfig=<architecture-A> --toolchain=<architecture-A- ↵
  toolchain-path> --quiet go &
$ ptxdist --select=<project-B-config> --platformconfig=<architecture-B> --toolchain=<architecture-B- ↵
  toolchain-path> go
```

Running one PTXdist in background and one in foreground would render the console output unreadable. That is why the background PTXdist uses the `--quiet` parameter in the examples above. Its output is still available in the logfile under the platform build directory tree.

By using more than one virtual console, both PTXdists can run with their full output on the console.

6.7 Using a Distributed Compiler

To increase the build speed of a PTXdist project can be done by doing more tasks in parallel. PTXdist itself uses all available CPU cores by default, but is limited to the local host. For further speedup a distributed compilation can be used. This is the task of *ICECC* aka *icecream*. With this feature a PTXdist project can make use of all available hosts and their CPUs in a local network.

6.7.1 Setting-Up the Distributed Compiler

How to setup the distributed compiler can be found on the project's homepage at GITHUB:

<https://github.com/icecc/icecream>.

Read their README.md for further details.



Please note: as of July 2014 you need at least an *ICECC* in its version 1.x. Older revisions are known to not work.

6.7.2 Enabling PTXdist for the Distributed Compiler

Since the 2014.07 release, PTXdist supports the usage of *ICECC* by simply enabling a setup switch.

Run the PTXdist setup and navigate to the new *ICECC* menu entry:

```
$ ptxdist setup
Developer Options  --->
  [*] use icecc
  (/usr/lib/icecc/icecc-create-env) icecc-create-env path
```

Maybe you must adapt the `icecc-create-env` path to the setting on your host. Most of the time the default path should work.

6.7.3 How to use the Distributed Compiler with PTXdist

PTXdist still uses two times the count of cores of the local CPU for parallel tasks. But if a faster CPU in the net exists, *ICECC* will now start to do all compile tasks on this/these faster CPU(s) instead of the local CPU.

To really boost the build speed you must increase the tasks to be done in parallel manually. Use the `-ji<x>` command line option to start more tasks at the same time. This command line option just effects one package to build at a time. To more increase the build speed use the `-je<x>` command line option as well. This will build also packages in parallel.

A complete command line could look like this:

```
$ ptxdist go -ji64 -je8
```

This command line will run up to 64 tasks in parallel and builds 8 packages at the same time. Never worry again about your local host and how slow it is. With the help of *ICECC* every host will be a high speed development machine.

6.8 Using pre-build archives

PTXdist is a tool which creates all the required parts of a target's filesystem to breathe life into it. And it creates these parts from any kind of source files. If a PTXdist project consists of many packages the build may take a huge amount of time.

For internal checks we have a so called "ALL-YES" PTXdist project. It has - like the name suggests - all packages enabled which PTXdist supports. To build this "ALL-YES" PTXdist project our build server needs about 6 hours.

6.8.1 Introduction

While the development of a PTXdist project it is needed to clean and re-build everything from time to time to get a re-synced project result which honors all changes made in the project. But since cleaning and re-building everything from time to time is a very good test case if some adaptations are still missing or if everything is complete, it can be a real time sink to do so.

To not lose developer's temper when doing such tests, PTXdist can keep archives from the last run which includes all the files the package's build system has installed while the PTXdist's *install* stage runs for it.

The next time PTXdist should build a package it can use the results from the last run instead. This feature can drastically reduce the time to re-build the whole project. But also, this PTXdist feature must handle with care and so it is not enabled and used as default.

This section describes how to make use of this PTXdist feature and what pitfalls exists when doing so.

6.8.2 Creating pre-build archives

To make PTXdist creating pre-build archives, enable this feature prior a build in the menu:

```
$ ptxdist menuconfig

Project Name & Version --->
  [*] create pre-build archives
```

Now run a regular build of the whole project:

```
$ ptxdist go
```

When the build is finished, the directory `platform-i586/packages` contains additional archives files with the name scheme `*-dev.tar.gz`. These files are the pre-build archives which PTXdist can use later on to re-build the project.

6.8.3 Using pre-build archives

To make PTXdist using pre-build archives, enable this feature prior a build in the menu:

```
$ ptxdist menuconfig

Project Name & Version --->
  [*] use pre-build archives
  (</some/path/to/the/archives>)
```

With the next build (e.g. `ptxdist go`) PTXdist will look for a specific package if its corresponding pre-build archive does exist. If it does exist and the used hash value in the pre-build archive's filename matches, PTXdist will skip all source archive handling (extract, patch, compile and install) and just extract and use the pre-build archive's content.

A regular and save usecase of pre-build archives is:

- using one pre-build archive pool for one specific PTXdist project.
- using a constant PTXdist version all the time.
- using a constant `OSELAS.Toolchain()` version all the time.

- no package with a pre-build archive in the project is under development.

The hash as a part of the pre-build archive's filename does only reflect the package's configuration made in the menu (ptxdist menuconfig). If this package specific configuration changes, a new hash value will be the result and PTXdist can select the corresponding correct pre-build archive.

This hash value change is an important fact, as many things outside and inside the package can have a big impact of the binary result but without a hash value change!

Please be careful when using the pre-build archives if you:

- intend to switch to a different toolchain with the next build.
- change the patch set applied to the corresponding package, e.g. a package is under development.
- change the hard coded configure settings in the package's rule file, e.g. a package is under development
- intend to use one pre-build archive pool from different PTXdist projects.

To consider all these precautions the generated pre-build archives are not transferred automatically where the next build expects them. This must be done manually by the user of the PTXdist project. Doing so, we can decide on a package by package base if its pre-build archive should be used or not.

6.8.4 Packages without pre-build archives support

No host nor cross related packages can be used based on their pre-build archives. These kind of packages are always (re-)built.

Only target related packages can be used based on their pre-build archives, but there are a few exceptions:

- Linux kernel: It has an incomplete install stage, which results into an incomplete pre-build archive. Due to this, it cannot be used as a pre-build archive
- Barebox bootloader: It has an incomplete install stage, which results into an incomplete pre-build archive. Due to this, it cannot be used as a pre-build archive
- some other somehow broken packages all marked with a `<packagename>_DEVPKG := NO` in their corresponding rule file

6.8.5 Workflow with pre-build archives

We starting with an empty PTXdist project and enabling the pre-build archive feature as mentioned in 6.8.2. After that a regular build of the project can be made.

When the build is finished its time to copy all the pre-build archives of interest where the next build will expect them. 6.8.3 mentions the step to enable their use. It also allows to define a directory. The default path of this directory is made from various other menu settings, to ensure the pre-build archives of the current PTXdist project do not conflict with pre-build archives of different PTXdist projects. To get an idea what the final path is, we can ask PTXdist.

```
$ ptxdist print PTXCONF_PROJECT_DEVPKGDIR
/home/jbe/OSELAS.BSP/Pengutronix/OSELAS.BSP-Pengutronix-Generic-2014.07.0
```

If this directory does not exist, we can simply create it:

```
$ mkdir -p /home/jbe/OSELAS.BSP/Pengutronix/OSELAS.BSP-Pengutronix-Generic-2014.07.0
```

Now its time to copy the pre-build archives to this new directory. We could simply copy all pre-build archives from the `platform-i586//packages` directory. But we should keep in mind, if any of the related packages are under development, we must omit its corresponding pre-build archives in this step.

```
$ cp platform-i586/packages/*-dev.tar.gz /home/jbe/OSELAS.BSP/Pengutronix/OSELAS.BSP-Pengutronix-Generi-2014.07.0
```

6.8.6 Uses cases

Some major possible use cases are covered in this section:

- Speed up a re-build of one single project
- Sharing pre-build archives between two platforms based on the same architecture

To simply speed up a re-build of the whole project (without development on any of the used packages) we just can copy all `*-dev.tar.gz` archives after the first build to the location where PTXdist expects them at the next build time.

If two platforms are sharing the same architecture it is possible to share pre-build archives as well. The best way it can work is, if both platforms are part of the same PTXdist project. They must also share the same toolchain settings, patch series and rule files. If these precautions are handled the whole project can be built for the first platform and these pre-build archives can be used to build the project for the second platform. This can reduce the required time to build the second platform from hours to minutes.

6.9 Downloading Packages from the Web

Sometimes it makes sense to get all required source archives at once. For example prior to a shipment we want to also include all source archives, to free the user from downloading it by him/herself.

PTXdist supports this requirement by the `export_src` parameter. It collects all required source archives into one given single directory. To do so, the current project must be set up correctly, e.g. the `select` and `platform` commands must be ran prior the `export_src` step.

If everything is set up correctly we can run the following commands to get the full list of required archives to build the project again without an internet connection.

```
$ mkdir my_archives
$ ptxdist export_src my_archives
```

PTXdist will now collect all source archives to the `my_archives/` directory.

Note: If PTXdist is configured to share one source archive directory for all projects, this step will simply copy the source archives from the shared source archive directory. Otherwise PTXdist will start to download them from the world wide web.

6.10 Creating a new Autotools Based Library

Developing your own library can be one of the required tasks to support an embedded system. PTXdist comes with an autotoolized library template which can be simply integrated into a PTXdist project.

6.10.1 Creating the Library Template

Creating the library package can be done by the PTXdist's *newpackage* command:

```
[jbe@host]> ptxdist newpackage src-autoconf-lib

ptxdist: creating a new 'src-autoconf-lib' package:

ptxdist: enter package name.....: foo
ptxdist: enter version number.....: 1
ptxdist: enter package author.....: Juergen Borleis <jbe@pengutronix.de>
ptxdist: enter package section.....: project_specific

generating rules/foo.make
generating rules/foo.in

local_src/foo does not exist, create? [Y/n] Y
./
./internal.h
./@name@.c
./configure.ac
./README
./COPYING
./Makefile.am
./lib@name@.pc.in
./autogen.sh
./lib@name@.h
./wizard.sh
```

After this step the new directory `local_src/foo` exists and contains various template files. All of these files are dedicated to be modified by yourself.

The content of this directory is:

```
[jbe@host]> ls -l local_src/foo/
total 48
-rw-r--r-- 1 jbe ptx  335 Jun 18 23:00 COPYING
-rw-r--r-- 1 jbe ptx 1768 Jun 18 23:16 Makefile.am
-rw-r--r-- 1 jbe ptx 1370 Jun 18 23:16 README
-rwxr-xr-x 1 jbe ptx  267 Apr 16  2012 autogen.sh
-rw-r--r-- 1 jbe ptx 11947 Jun 18 23:16 configure.ac
-rw-r--r-- 1 jbe ptx  708 Jun 18 23:16 foo.c
-rw-r--r-- 1 jbe ptx  428 Jun 18 23:00 internal.h
-rw-r--r-- 1 jbe ptx  185 Jun 18 23:16 libfoo.h
-rw-r--r-- 1 jbe ptx  331 Jun 18 23:16 libfoo.pc.in
drwxr-xr-x 2 jbe ptx 4096 Jun 18 23:16 m4
```

6.10.2 Licence related stuff

COPYING

You must think about the licence your library uses. The template file `COPYING` contains some links to GPL/LGPL texts you can use. Replace the `COPYING`'s content by one of the listed licence files or something different. But do not omit this step. Never!

6.10.3 Build system related files

autogen.sh

The autotools are using macro files which are easier to read for a human. But to work with the autotools these macro files must be converted into executable shell code first. The `autogen.sh` script does this job for us.

configure.ac

This is the first part of the autotools based build system. Its purpose is to collect as much required information as possible about the target to build the library for. This file is a macro file. It uses a bunch of M4 macros to define the job to do. The autotools are complex and this macro file should help you to create a useful and cross compile aware configure script everybody can use.

This macro file is full of examples and comments. Many M4 macros are commented out and you can decide if you need them to detect special features about the target.

Search for the "TODO" keyword and adapt the setting to your needs. After that you should remove the "TODO" comments to not confuse any user later on.

Special hints about some M4 macros:

AC_INIT add the intended revision number (the second argument), an email address to report bugs and some web info about your library. The intended revision number will be part of the released archive name later on. You can keep it in sync with the `API_RELEASE`, but you must not.

AC_PREFIX_DEFAULT most of the time you can remove this entry, because most users expect the default install path prefix is `/usr/local` which is always the default if not changed by this macro.

API_RELEASE defines the API version of your library. This API version will be part of the binary library's name later on.

LT_CURRENT / LT_REVISION / LT_AGE define the binary compatibility of your library. The rules how these numbers are defined are:

- library code was modified: `LT_REVISION++`
- interfaces changed/added/removed: `LT_CURRENT++` and `LT_REVISION = 0`
- interfaces added: `LT_AGE++`
- interfaces removed: `LT_AGE = 0`

You must manually change these numbers whenever you change the code in your library prior a release.

CC_CHECK_CFLAGS / CC_CHECK_LDFLAGS if you need special command line parameters given to the compiler or linker, don't add them unconditionally. Always test, if the tools can handle the parameter and fail gracefully if not. Use `CC_CHECK_CFLAGS` to check parameters for the compiler and `CC_CHECK_LDFLAGS` for the linker.

AX_HARDWARE_FP / AX_DETECT_ARMV* sometimes it is important to know for which architecture or CPU the current build is for and if it supports hard float or not. Please don't try to guess it. Ask the compiler instead. The M4 `AX_HARDWARE_FP` and `AX_DETECT_ARMV*` macros will help you.

REQUIRES to enrich the generated *.pc file for easier dependency handling you should also fill the `REQUIRES` variable. Here you can define from the package management point of view the dependencies of your library. For example if your library depends on the 'udev' library and requires a specific version of it, just add the string `udev >= 1.0.0` to the `REQUIRES` variable. Note: the listed packages must be comma-separated.

CONFLICTS if your library conflicts with a different library, add this different library to the `CONFLICTS` variable (from the package management point of view).

It might be a good idea to include the API version into the names of the library's include file and `pkg-config` file. For example in the first API version all files are named like this:

- `/usr/local/lib/libfoo-1.so.0.0.0`
- `/usr/local/include/libfoo-1.h`
- `/usr/local/lib/pkgconfig/libfoo-1.pc`

In this case its simple to create the next generation `libfoo` without conflicting with earlier versions of your library: they can co-exist side by side.

- `/usr/local/lib/libfoo-1.so.0.0.0`
- `/usr/local/lib/libfoo-2.so.0.0.0`
- `/usr/local/include/libfoo-1.h`
- `/usr/local/include/libfoo-2.h`
- `/usr/local/lib/pkgconfig/libfoo-1.pc`
- `/usr/local/lib/pkgconfig/libfoo-2.pc`

If you want to do so, you must rename the header file and the `pc` file accordingly. And adapt the `pkgconfig_DATA` and `include_HEADERS` entries in the `Makefile.am` file, and the `AC_CONFIG_FILES` in the `configure.ac` file.

Makefile.am

Special hints:

SUBDIR if your project contains more than one sub-directory to build, add these directories here. Keep in mind, these directories are visited in this order (but never in parallel), so you must handle dependencies manually.

***_CPPFLAGS / *_CFLAGS / *_LIBADD** if your library has some optional external dependencies add them on demand (external libraries for example). Keep in mind to not mix `CPPFLAGS` and `CFLAGS` additions. And do not add these additions fixed to the `*_CPPFLAGS` and `*_CFLAGS` variables, let 'configure' do it in a sane way. Whenever you want to forward special things to the `*_CPPFLAGS` and `*_CFLAGS`, don't forget to add the `AM_CPPFLAGS` and `AM_CFLAGS`, else they get lost. Never add libraries to the `*_LDFLAGS` variable. Always add them to the `*_LIBADD` variable instead. This is important because the autotools forward all these variable based parameters in a specific order to the tools (compiler and linker).

6.10.4 Template file for `pkg-config`

`libfoo.pc.in`

This file gets installed to support the `pkg-config` tool for package management. It contains some important information how to use your library and also handles its dependencies.

Special hints:

Name A human-readable name for the library.

Description add a brief description of your library here

Version the main revision of the library. Will automatically replaced from your settings in `configure.ac`.

URL where to find your library. Will automatically replaced from your settings in `configure.ac`.

Requires.private comma-separated list of packages your library depends on and managed by `pkg-config`. The listed packages gets honored for the static linking case and should not be given again in the `Libs.private` line. This line will be filled by the `REQUIRES` variable from the `configure.ac`.

Conflicts list of packages your library conflicts with. Will automatically replaced from your `CONFLICTS` variable settings in `configure.ac`.

Libs defines the linker command line content to link your library against other applications or libraries

Libs.private defines the linker command line content to link your library against other application or libraries statically. List only libraries here which are not managed by `pkg-config` (e.g. do not conflict with packages given in the `Requires`).

This line will be filled by the `LIBS` variable from the `configure.ac`.

Cflags required compile flags to make use of your library. Unfortunately you must mix `CPPFLAGS` and `CFLAGS` here which is a really bad idea.

It is not easy to fully automate the adaption of the `pc` file. At least the lines `Requires.private` and `Libs.private` are hardly to fill for packages which are highly configurable.

6.10.5 Generic template files

m4/*

M4 macros used in `configure.ac`.

If you use more no generic M4 macros in your `configure.ac` file, don't forget to add their source files to the `m4` directory. This will enable any user of your library to re-generate the autotools based files without providing all dependencies by themselves.

6.10.6 Library related files

README

Prepared file with some information about the library you provide. Be kind to the users of your library and write some sentences about basic features and usage of your library, how to configure it and how to build it.

libfoo.h

This file will be installed. It defines the API your library provides and will be used by other applications.

internal.h

This file will not be installed. It will be used only at build time of your library.

foo.c

The main source file of your library. Keep in mind to mark all functions with the `DSO_VISIBLE` macro you want to export. All other functions are kept internally and you cannot link against them from an external application.

Note: debugging is hard when all internal functions are hidden. For this case you should configure the library with the `--disable-hide` or with `--enable-debug` which includes switching off hiding functions.

6.11 Frequently Asked Questions (FAQ)

Q: PTXdist does not support to generate some files in a way I need them. What can I do?

A: Everything PTXdist builds is controlled by "package rule files", which in fact are Makefiles (`rules/*.make`). If you modify such a file you can change its behaviour in a way you need. It is generally no good idea to modify the generic package rule files installed by PTXdist, but it is always possible to copy one of them over into the `rules/` directory of a project. Package rule files in the project will precede global rule files with the same name.

Q: My kernel build fails. But I cannot detect the correct position, due to parallel building. How can I stop PTXdist to build in parallel?

A: Force PTXdist to stop building in parallel which looks somehow like:

```
[jbe@host]> ptxdist -j1 go
```

Q: I made my own rule file and now I get error messages like

```
my_project/rules/test.make:30: *** unterminated call to function 'call': missing ')'. Stop.
```

But line 30 only contains `@$(call targetinfo, $@)` and it seems all right. What does it mean?

A: Yes, this error message is confusing. But it usually only means that you should check the following (!) lines for missing backslashes (line separators).

Q: I got a message similar to "package <some name> is empty. not generating." What does it mean?

A: The 'ipkg' tool was advised to generate a new ipkg-packet, but the folder was empty. Sometime it means a typo in the package name when the `install_copy` macro was called. Ensure all these macros are using the same package name. Or did you disable a menuentry and now nothing will be installed?

Q: How do I download all required packages at once?

A: Run this command prior the build:

```
[jbe@host]> ptxdist make get
```

This starts to download all required packages in one run. It does nothing if the archives are already present in the source path. (run "PTXdist setup" first).

Q: I want to backup the source archives my PTXdist project relays on. How can I find out what packages my project requires to build?

A: First build your PTXdist project completely and then run the following command:

```
[jbe@host]> ptxdist export_src <archive directory>
```

It copies all archives from where are your source archives stored to `<archive directory>` which can be your backup media.

Q: To avoid building the OSELAS toolchain on each development host, I copied it to another machine. But on this machine I cannot build any BSP with this toolchain correctly. All applications on the target are failing to start

due to missing libraries.

A: This happens when the toolchain was copied without regarding to retain links. There are archive programs around that convert links into real files. When you are using such programs to create a toolchain archive this toolchain will be broken after extracting it again. Solution: Use archive programs that retain links as they are (tar for example). Here an example for a broken toolchain:

```
$ ll 'find . -name "libcrypt*"'
-rwxr-xr-x 1 mkl ptx 55K 2007-07-25 14:54 ./lib/libcrypt-2.5.so*
-rwxr-xr-x 1 mkl ptx 55K 2007-07-25 14:54 ./lib/libcrypt.so.1*
-rw-r--r-- 1 mkl ptx 63K 2007-07-25 14:54 ./usr/lib/libcrypt.a
-rw-r--r-- 1 mkl ptx 64K 2007-07-25 14:54 ./usr/lib/libcrypt_p.a
-rwxr-xr-x 1 mkl ptx 55K 2007-07-25 14:54 ./usr/lib/libcrypt.so*
```

And in contrast, this one is intact:

```
$ ll 'find . -name "libcrypt*"'
-rwxr-xr-x 1 mkl ptx 55K 2007-11-03 13:30 ./lib/libcrypt-2.5.so*
lrwxrwxrwx 1 mkl ptx 15 2008-02-20 14:52 ./lib/libcrypt.so.1 -> libcrypt-2.5.so*
-rw-r--r-- 1 mkl ptx 63K 2007-11-03 13:30 ./usr/lib/libcrypt.a
-rw-r--r-- 1 mkl ptx 64K 2007-11-03 13:30 ./usr/lib/libcrypt_p.a
lrwxrwxrwx 1 mkl ptx 23 2008-02-20 14:52 ./usr/lib/libcrypt.so -> ../../lib/libcrypt.so.1*
```

Q: I followed the instructions how to integrate my own plain source project into PTXdist. But when I try to build it, I get:

```
extract: archive=/path/to/my/sources
extract: dest=/path/to/my/project/build-target
Unknown format, cannot extract!
```

But the path exists!

A: PTXdist interprets a file:// (two slashes) in the URL as a project related relative path. So it searches only in the current project for the given path. Only file:/// (three slashes) will force PTXdist to use the path as an absolute one. This means: file://bla/blub will be used as ./bla/blub and file:///friesel/frasel as /friesel/frasel.

Q: I want to use more than one kernel revision in my BSP. How can I avoid maintaining one ptxconfig per kernel?

A: One solution could be to include the kernel revision into the name of the kernel config file. Instead of the default kernelconfig.target name you should use kernelconfig-<revision>.target. In the kernel config file menu entry you should enter kernelconfig-\$PTXCONF_KERNEL_VERSION.target. Whenever you change the linux kernel Version menu entry now, this will ensure using a different kernel config file, too.

Q: I'm trying to use a JAVA based package in PTXdist. But compiling fails badly. Does it ever work at Pengutronix?

A: This kind of packages only build correctly when an original SUN VM SDK is used. Run PTXdist setup and point the Java SDK menu entry to the installation path of your SUN JAVA SDK.

Q: I made a new project and everything seems fine. But when I start my target with the root filesystem generated by PTXdist, it fails with:

```
cannot run '/etc/init.d/rcS': No such file or directory
```

A: The error message is confusing. But this script needs /bin/sh to run. Most of the time this message occurs when /bin/sh does not exist. Did you enable it in your busybox configuration?

Q: I have created a path for my source archives and try to make PTXdist use it. But whenever I run PTXdist now it fails with the following error message:

```
/usr/local/bin/ptxdist: archives: command not found
```


A: In this case the path was `$HOME/source archives` which includes a whitespace in the name of the directory to store the source archives in. Handling directory or filenames with whitespaces in applications isn't trivial and also PTXdist suffers all over the place from this issue. The only solution is to avoid whitespaces in paths and filenames.

7 Document Revisions

2010/01/08 Initial Revision
2010/01/11 Section "Adding simple Files to the Build Process" added
2010/01/11 Section "Variables reference" added
2010/01/20 Section "Debugging with CPU emulation" added
2010/01/21 Section "PTXdist parameter reference" added
2010/04/15 Section "Adding new Packages" extended
2010/04/16 Section "Using Existing Toolchains" extended
2010/05/20 Section "Adding binary only Files" added
2010/05/20 Section "Adding Files into the Build" folded into "Adding binary only Files"
2010/05/20 Section "Adapting Userland Settings" extended
2011/01/27 Section "Rule File Macro Reference", 'install_tree' documentation added
2011/01/27 Section "Rule File Macro Reference", 'install_alternative' search order fixed
2011/01/27 Section "Variables Reference", some more useful variables added
2011/01/27 Section "Adding new Packages", documentation adapted to current ptxdist behaviour
2011/10/21 Section "Adding new Packages", documentation adapted to current ptxdist behaviour
2011/11/16 Section "Using an External Kernel Source Tree", documentation adapted to current ptxdist behaviour
2012/04/04 Section "Rule File Macro Reference", add more common macros
2012/04/05 Section "Rule file layout", documentation adapted to current ptxdist behaviour
2013/11/13 Section "Rule File Macro Reference", documentation adapted to current ptxdist behaviour
2013/12/09 Section "Increasing Build Speed" added
2013/12/12 Comics of "geek & poke" added all over the place. Enjoy!
2014/01/10 Section "Using pre-build archives" added
2014/06/19 Section "Creating a new Autotools Based Library" added
2014/07/07 Section "Using a Distributed Compiler" added
2014/07/07 Section "Frequently Asked Questions (FAQ)" added

x

8 Thanks

Usage of the "geek & poke" comics with kindly permission of Oliver Widder: <http://geek-and-poke.com>



GIT BLAME

The "geek & poke" comics are published under the Creative Commons License (CC BY 3.0).
http://creativecommons.org/licenses/by/3.0/deed.en_US

9 Getting help

Below is a list of locations where you can get help in case of trouble. For questions how to do something special with PTXdist or general questions about Linux in the embedded world, try these.

9.1 Mailing Lists

9.1.1 About PTXdist in Particular

This is an English language public mailing list for questions about PTXdist. See

http://www.pengutronix.de/maillinglists/index_en.html

on how to subscribe to this list. If you want to search through the mailing list archive, visit

<http://www.mail-archive.com/>

and search for the list *ptxdist*. Please note again that this mailing list is just related to the PTXdist as a software. For questions regarding your specific BSP, see the following items.

9.1.2 About Embedded Linux in General

This is a German language public mailing list for general questions about Linux in embedded environments. See

http://www.pengutronix.de/maillinglists/index_de.html

on how to subscribe to this list. Note: You can also send mails in English.

9.2 About Working on the Linux Kernel

The book *Linux Kernel in a Nutshell* from Greg Kroah-Hartman. Its online version can be read here:

<http://www.kroah.com/lkn/>

9.3 Chat/IRC

About PTXdist in particular

irc.freenode.net:6667

Create a connection to the **irc.freenode.net:6667** server and enter the chatroom **#ptxdist**. This is an English room to answer questions about PTXdist. Best time to meet somebody there is at European daytime.

9.4 Commercial Support

You can order immediate support through customer specific mailing lists, by telephone or also on site. Ask our sales representative for a price quotation for your special requirements.

Contact us at:

Pengutronix
Peiner Str. 6-8
31137 Hildesheim
Germany
Phone: +49 - 51 21 / 20 69 17 - 0
Fax: +49 - 51 21 / 20 69 17 - 55 55

or by electronic mail:

sales@pengutronix.de

This is a Pengutronix Quickstart Manual

**Copyright Pengutronix e.K.
All rights reserved.**

**Pengutronix e.K.
Peiner Str. 6-8
31137 Hildesheim
Germany**

**Phone: +49 - 51 21 / 20 69 17 - 0
Fax: +49 - 51 21 / 20 69 17 - 55 55**

